

FIG. 1

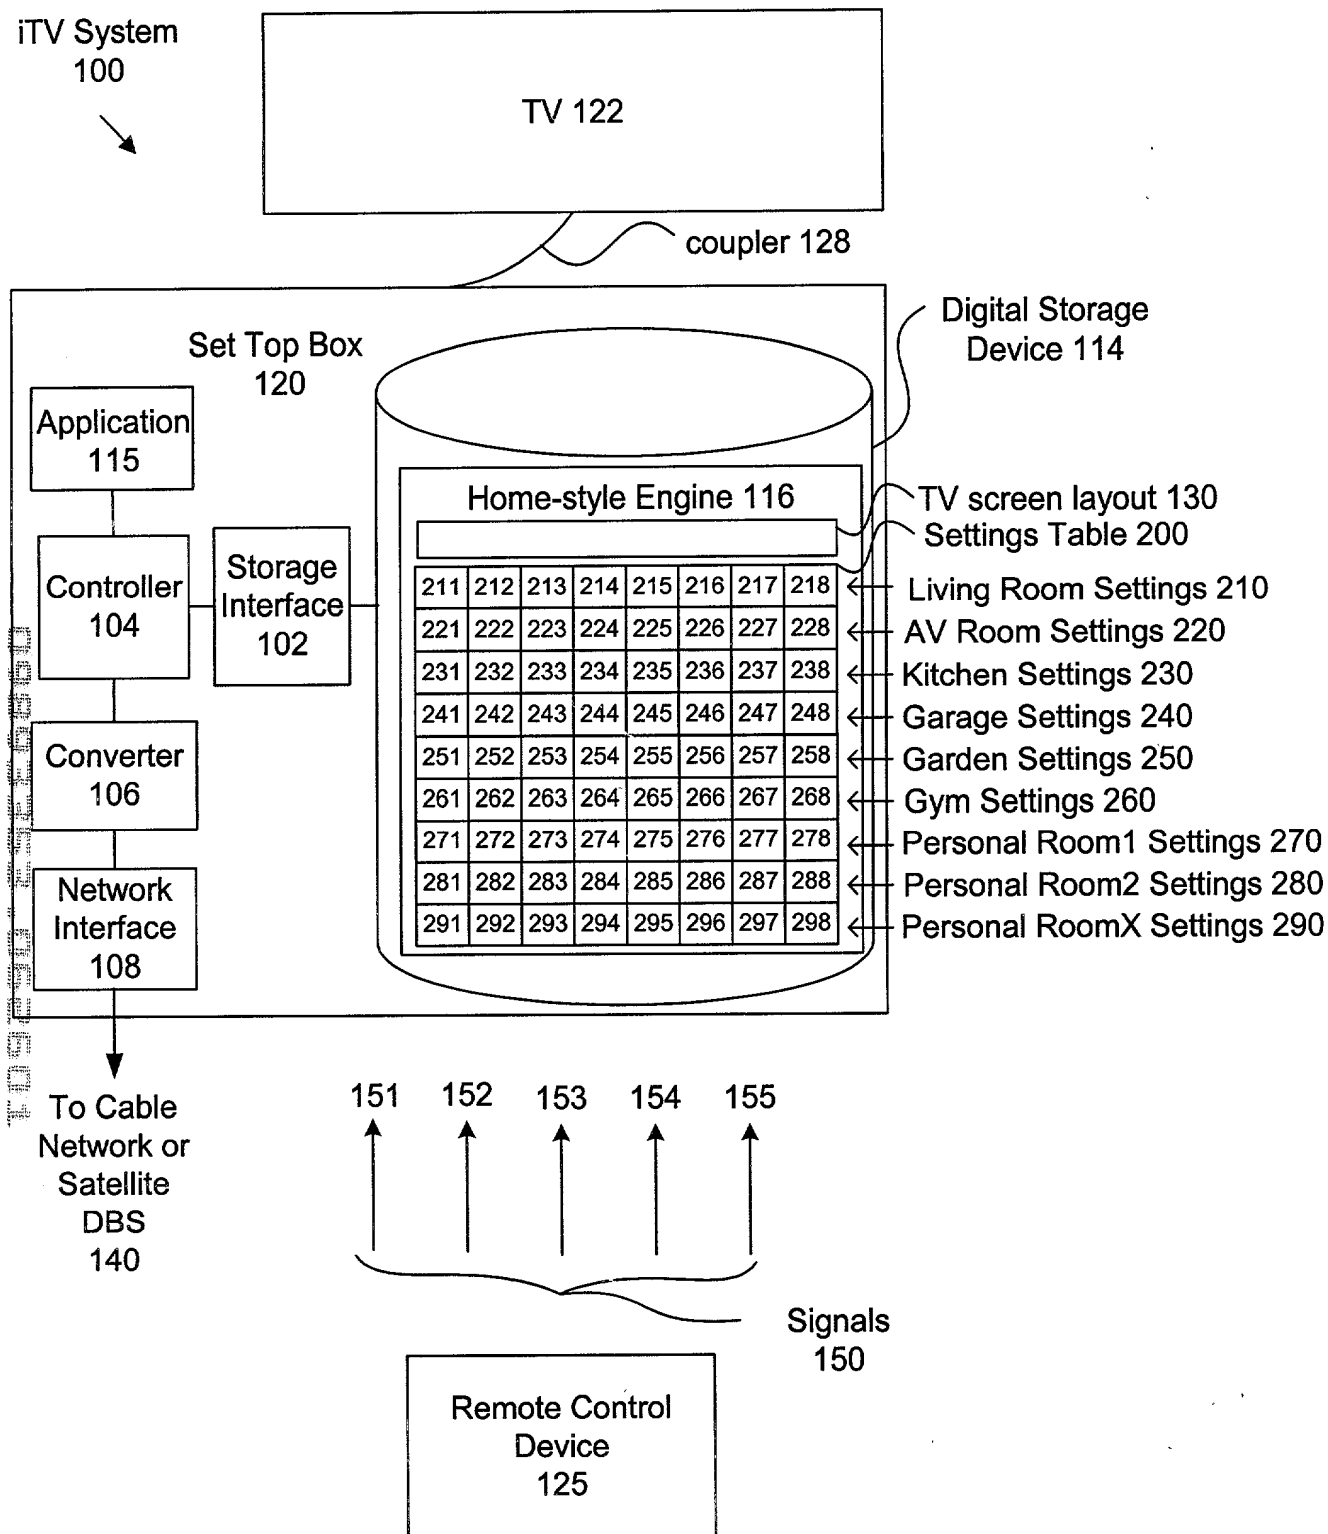 


FIG. 2

300



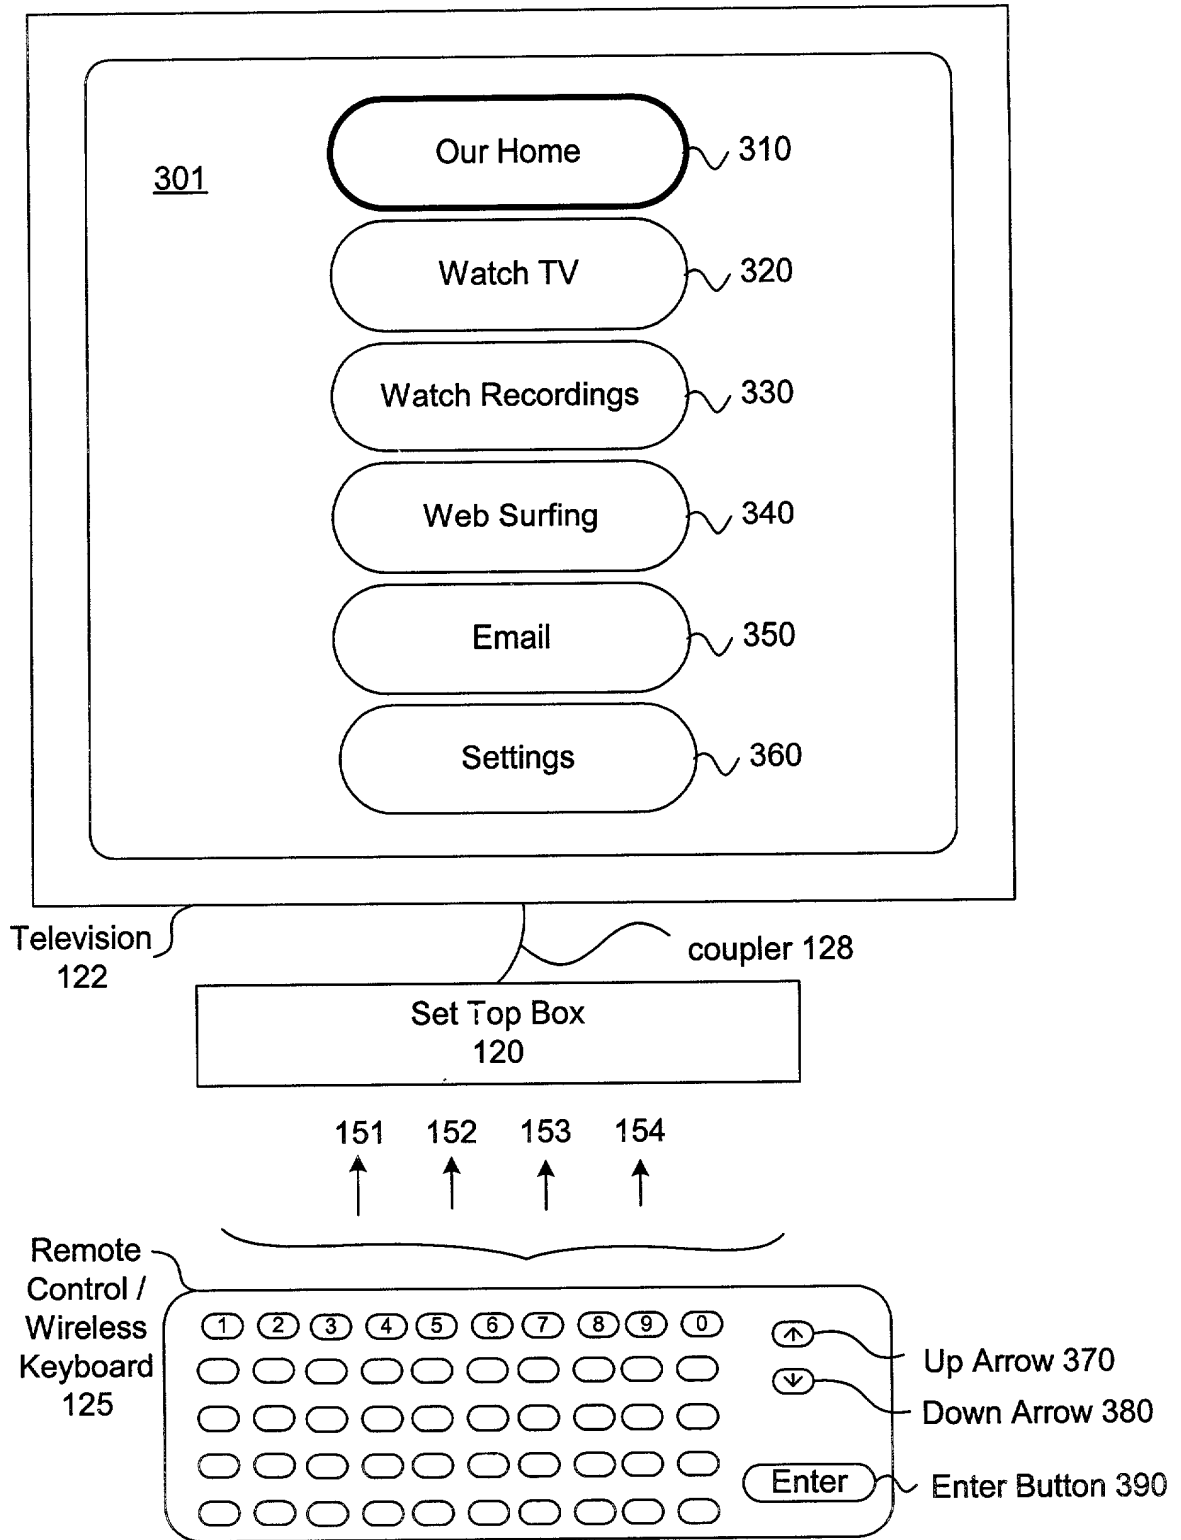 


FIG. 3

 400

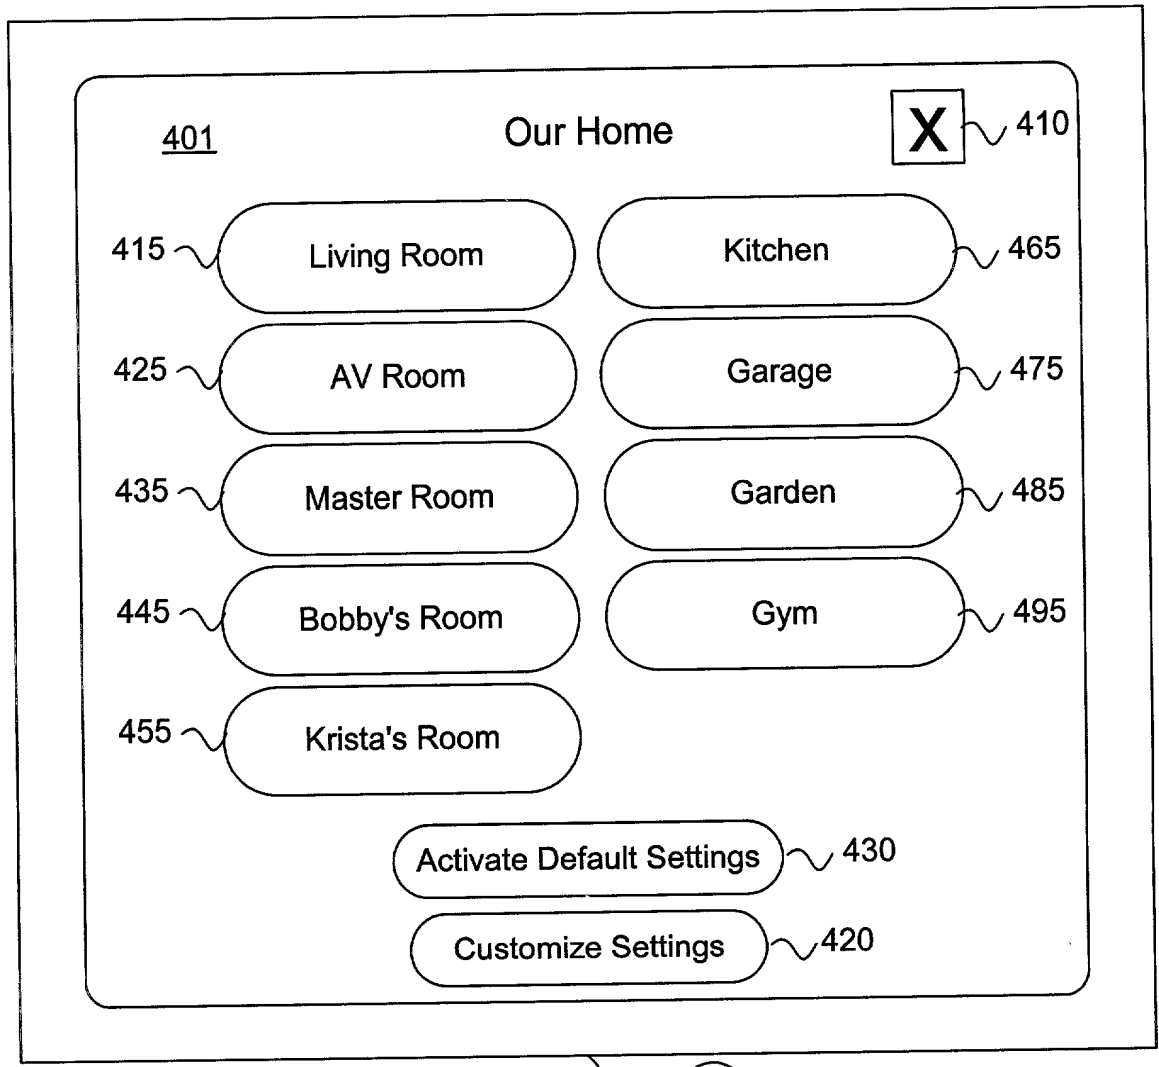


coupler 128

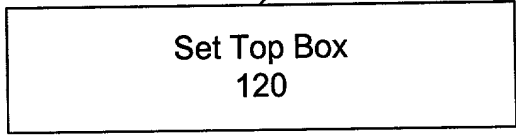 

152 153 154 155

 
Remote Control / Wireless Keyboard 125

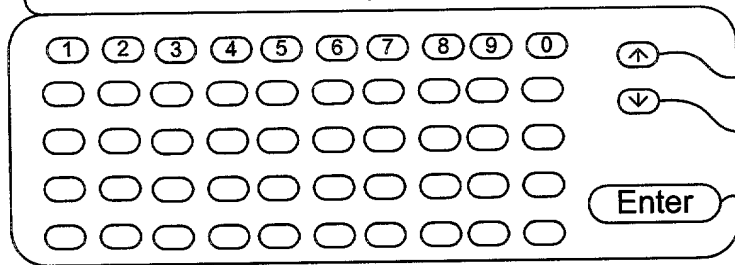


Up Arrow 370
Down Arrow 380
Enter Button 390

FIG. 4

 500

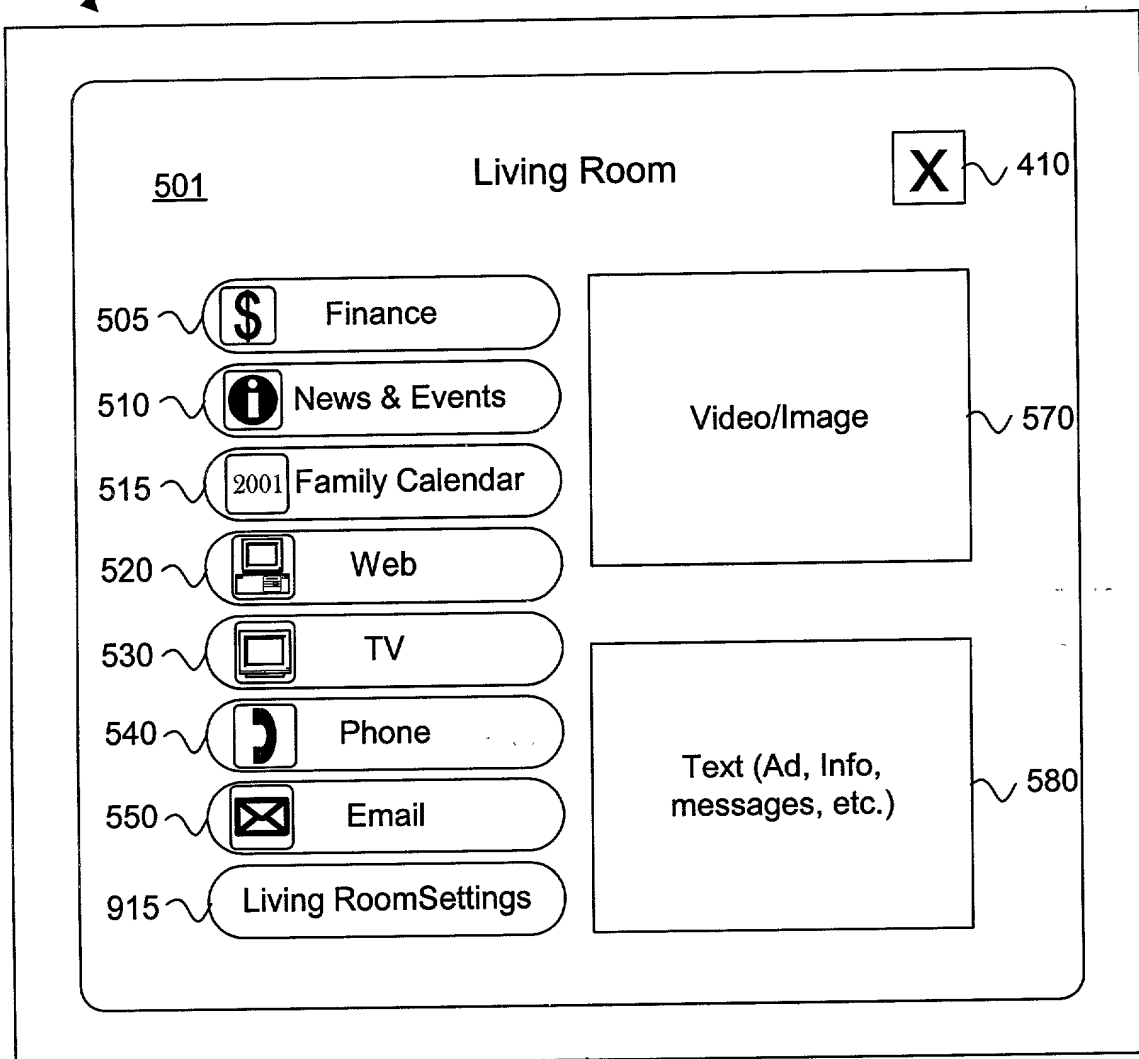


coupler 128

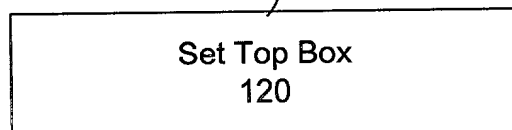 

152 153 154 155

 Remote Control / Wireless Keyboard 125

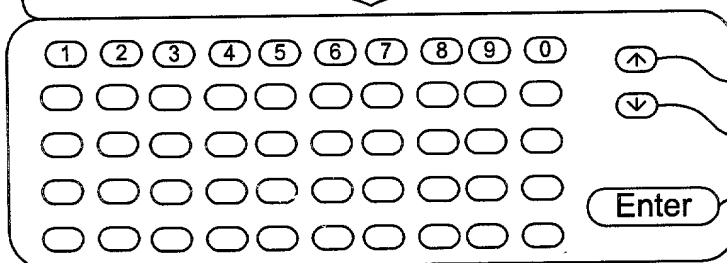


Up Arrow 370

Down Arrow 380


Enter Button 390

FIG. 5

 
600

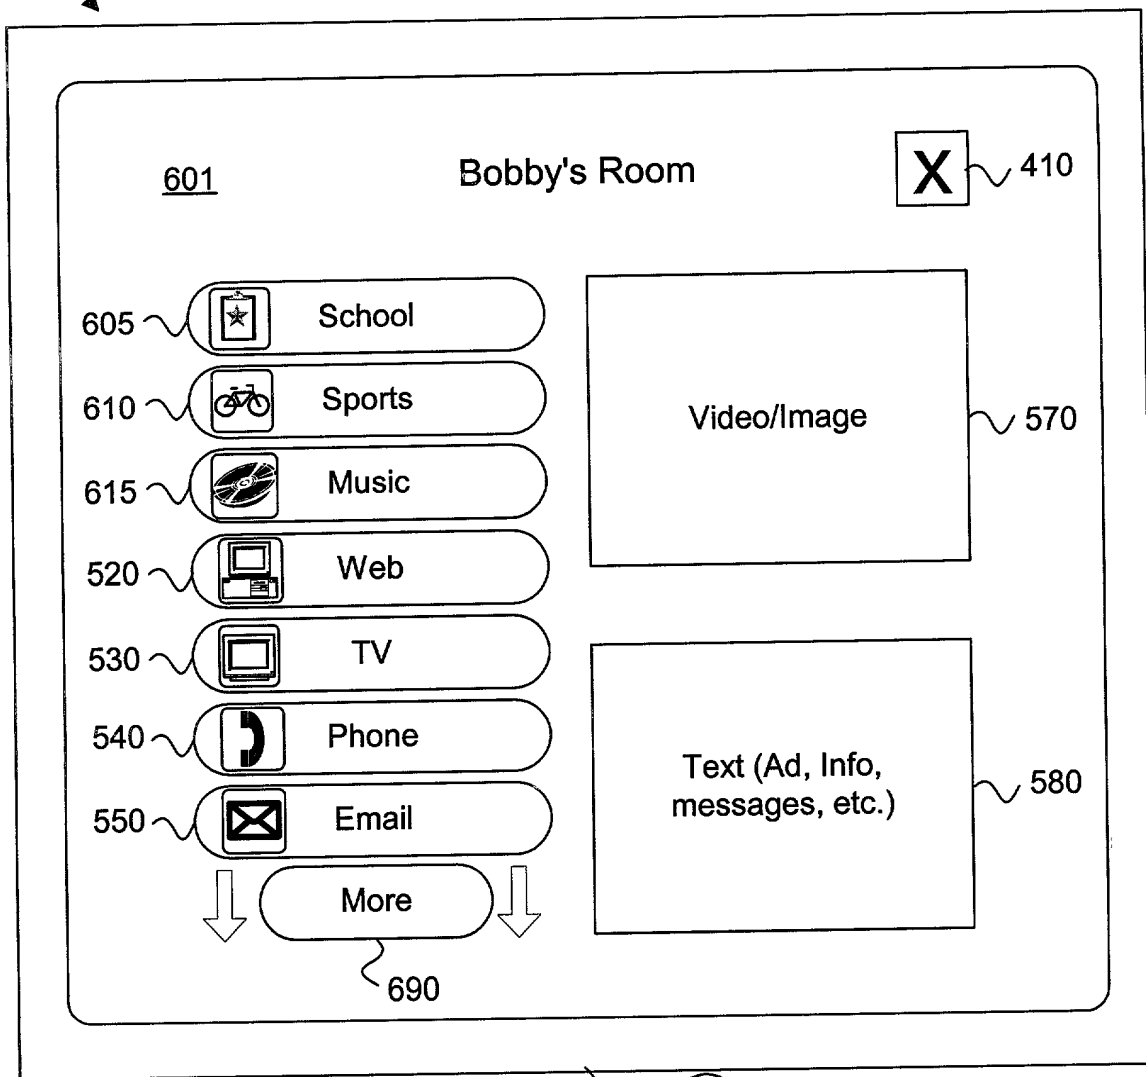

coupler 128

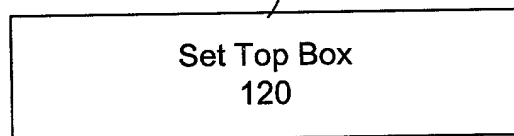 

152 153 154 155

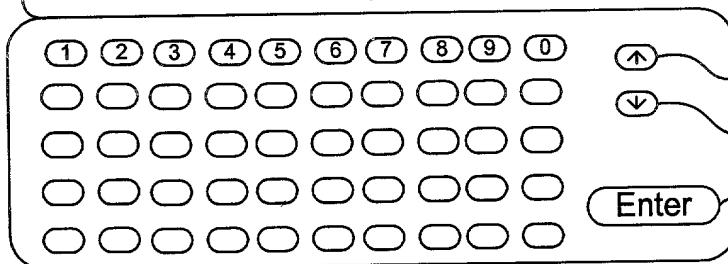 Remote
Control /
Wireless
Keyboard
125


Up Arrow 370

Down Arrow 380


Enter Button 390

FIG. 6

 700

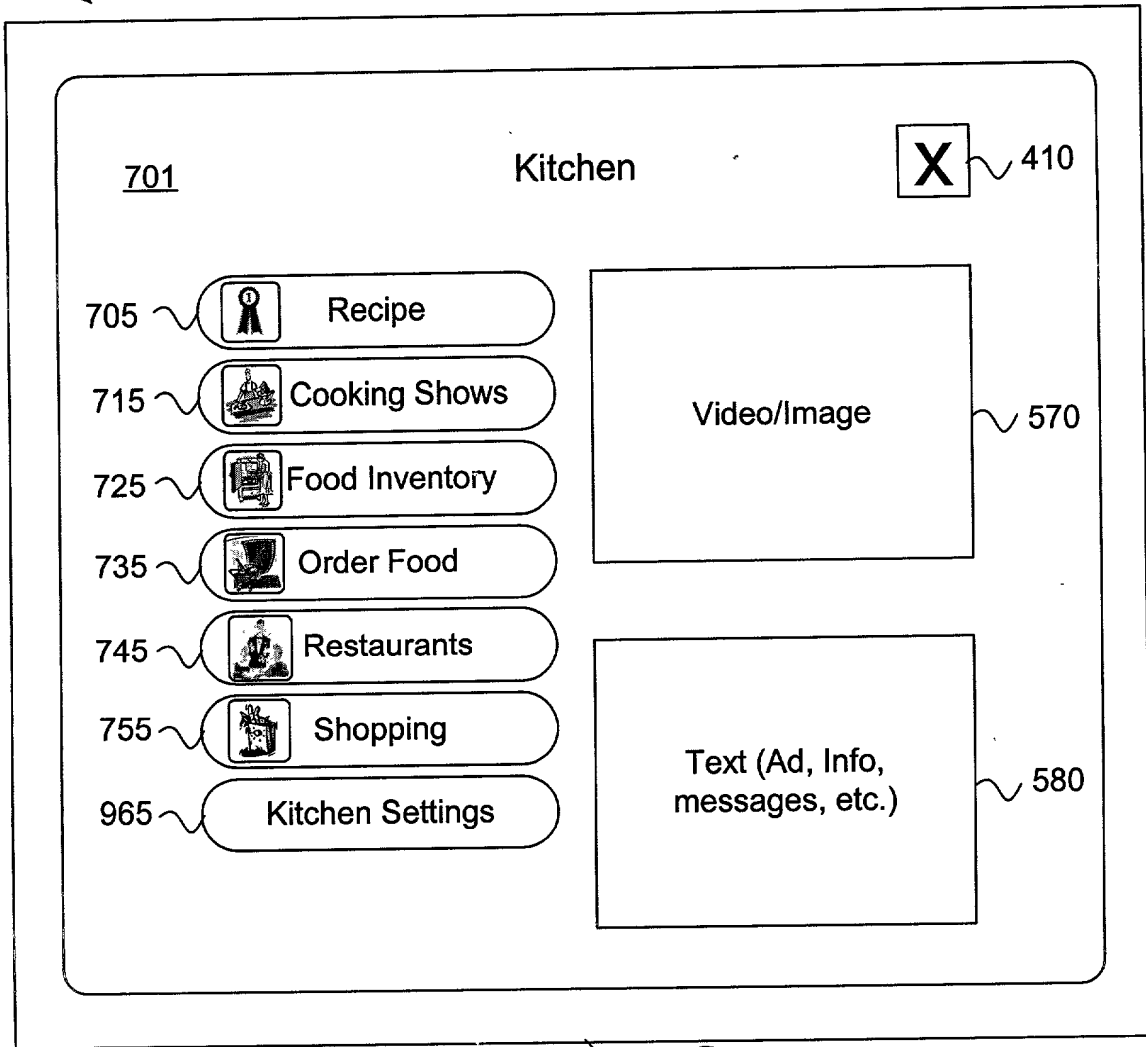


coupler 128

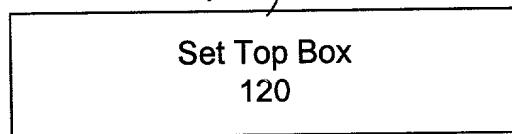 

152 153 154 155

 Remote Control / Wireless Keyboard 125

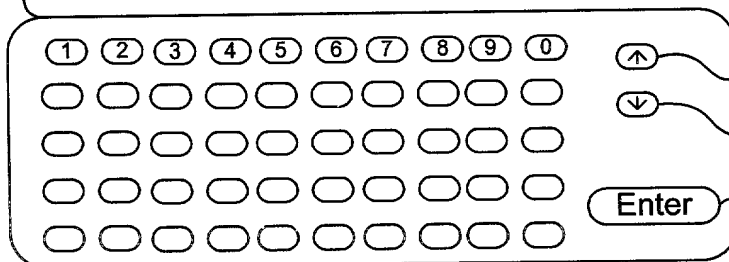

Up Arrow 370

Down Arrow 380

Enter Button 390

FIG. 7

800

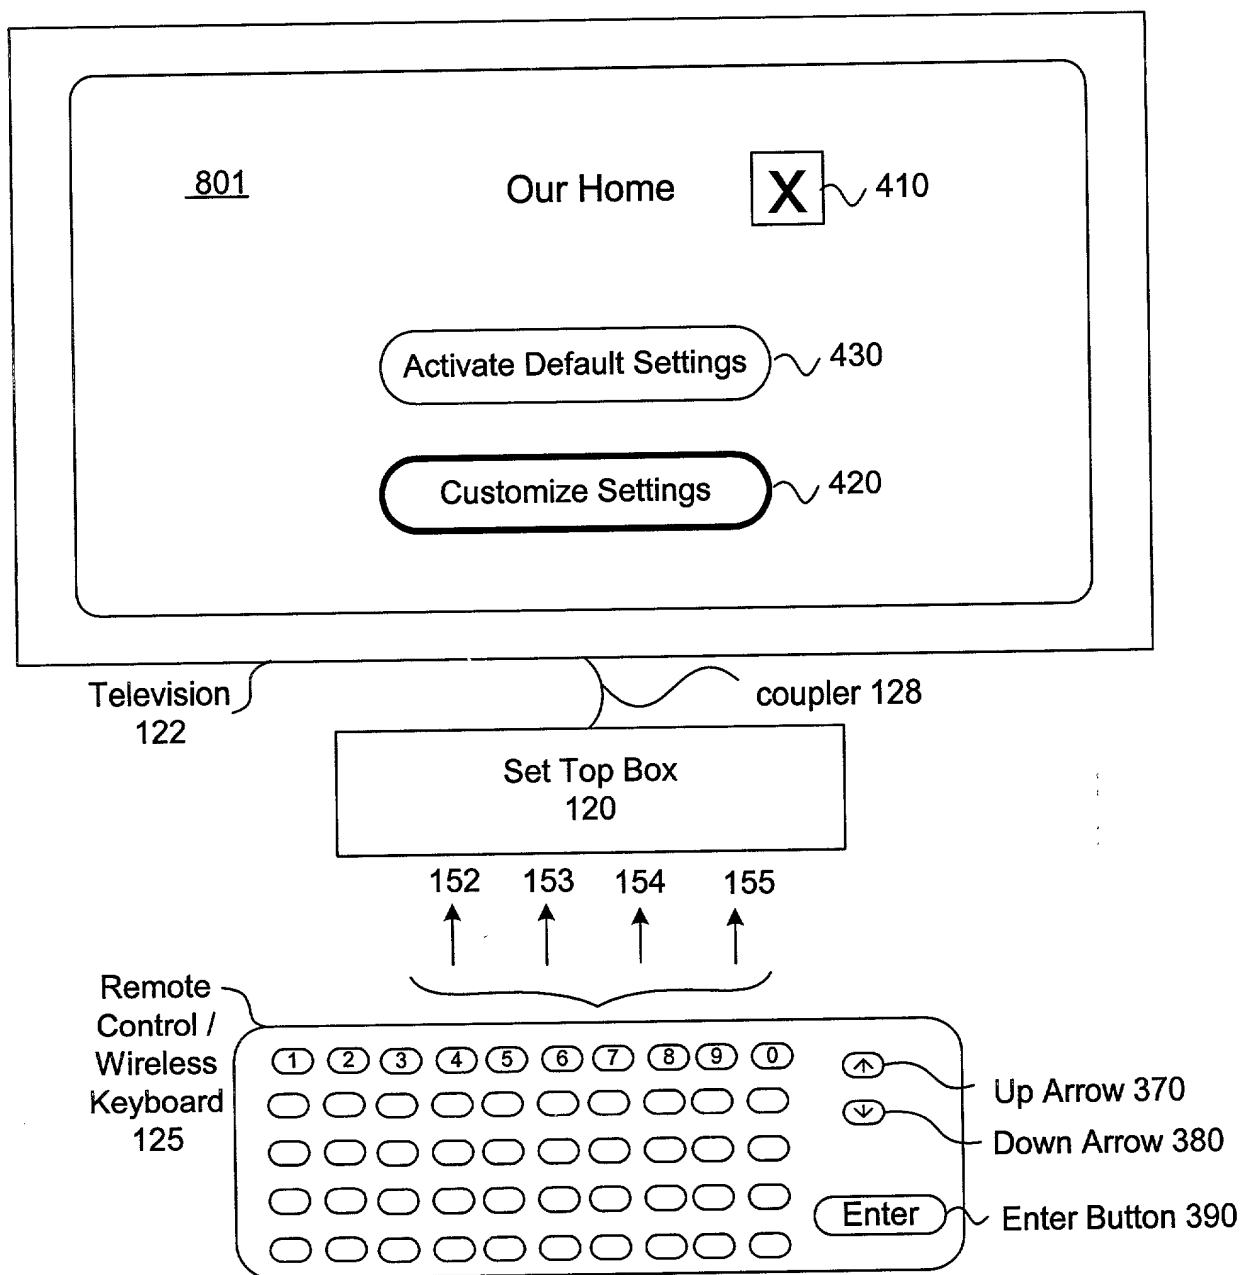 


FIG. 8


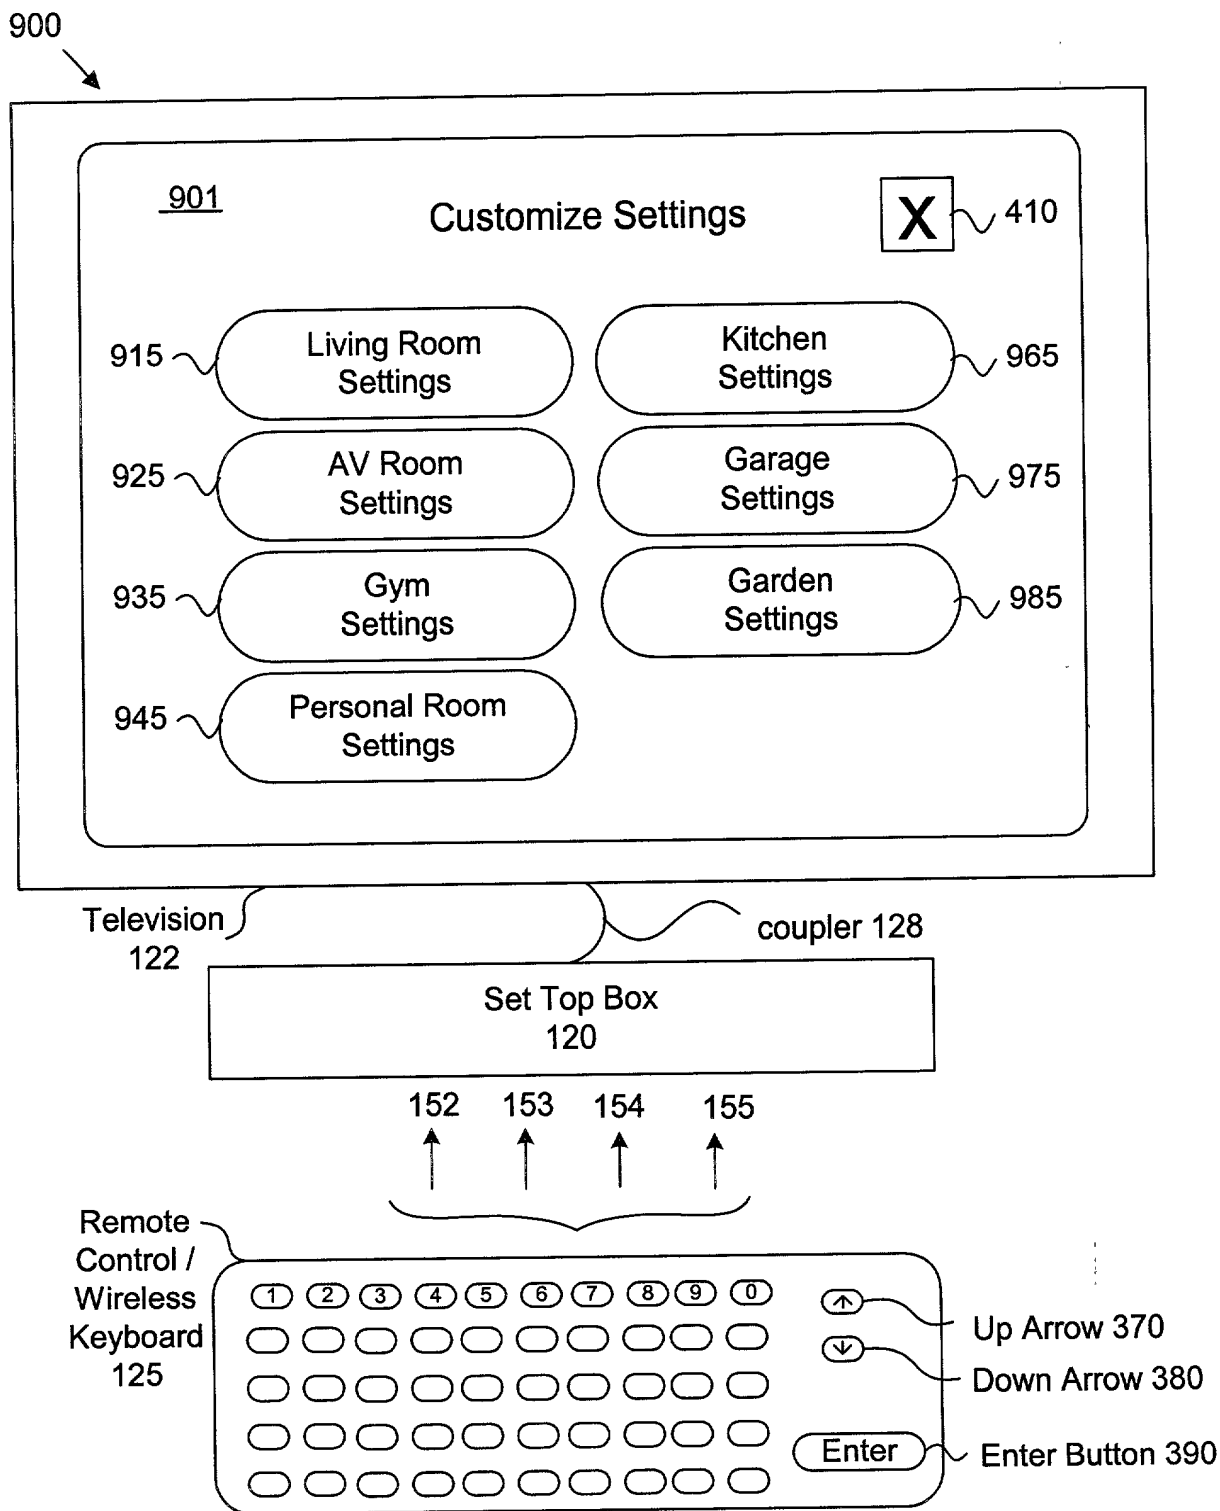 


FIG. 9

 1000

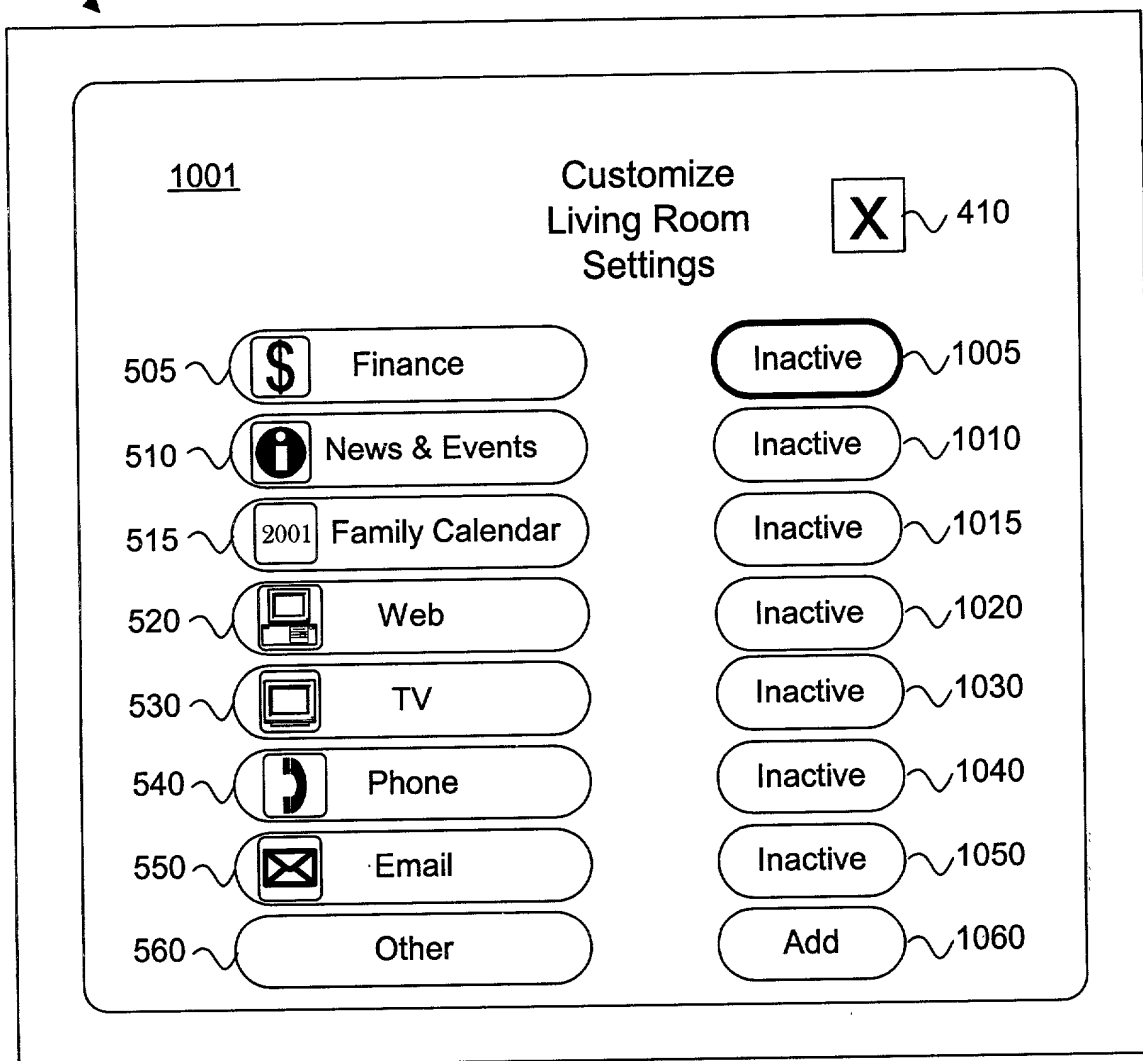

Television
122

coupler 128

Set Top Box
120

152 153 154 155

Remote
Control /
Wireless
Keyboard
125

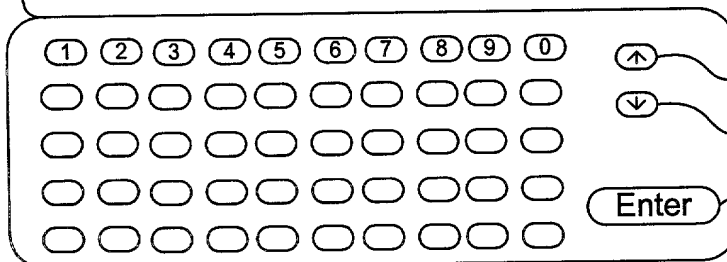 


FIG. 10

1100

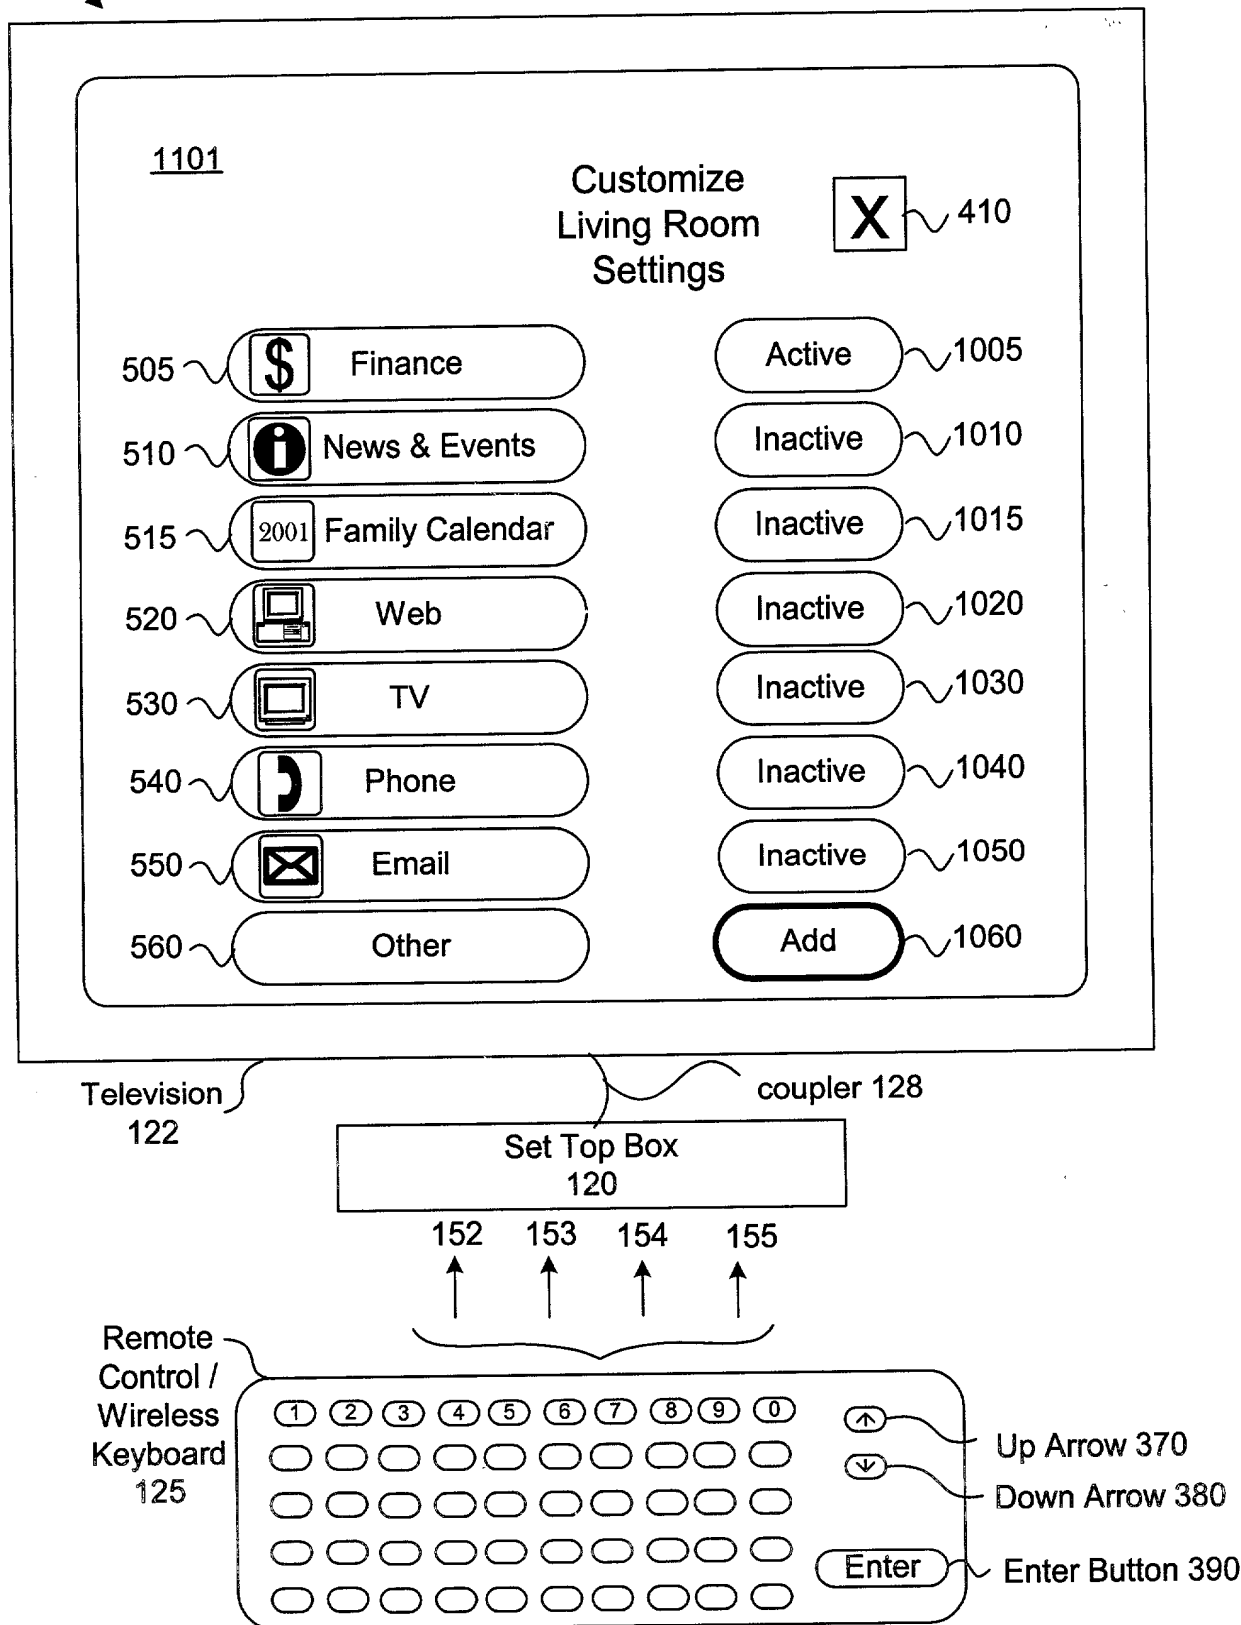 


FIG. 11

1200


 
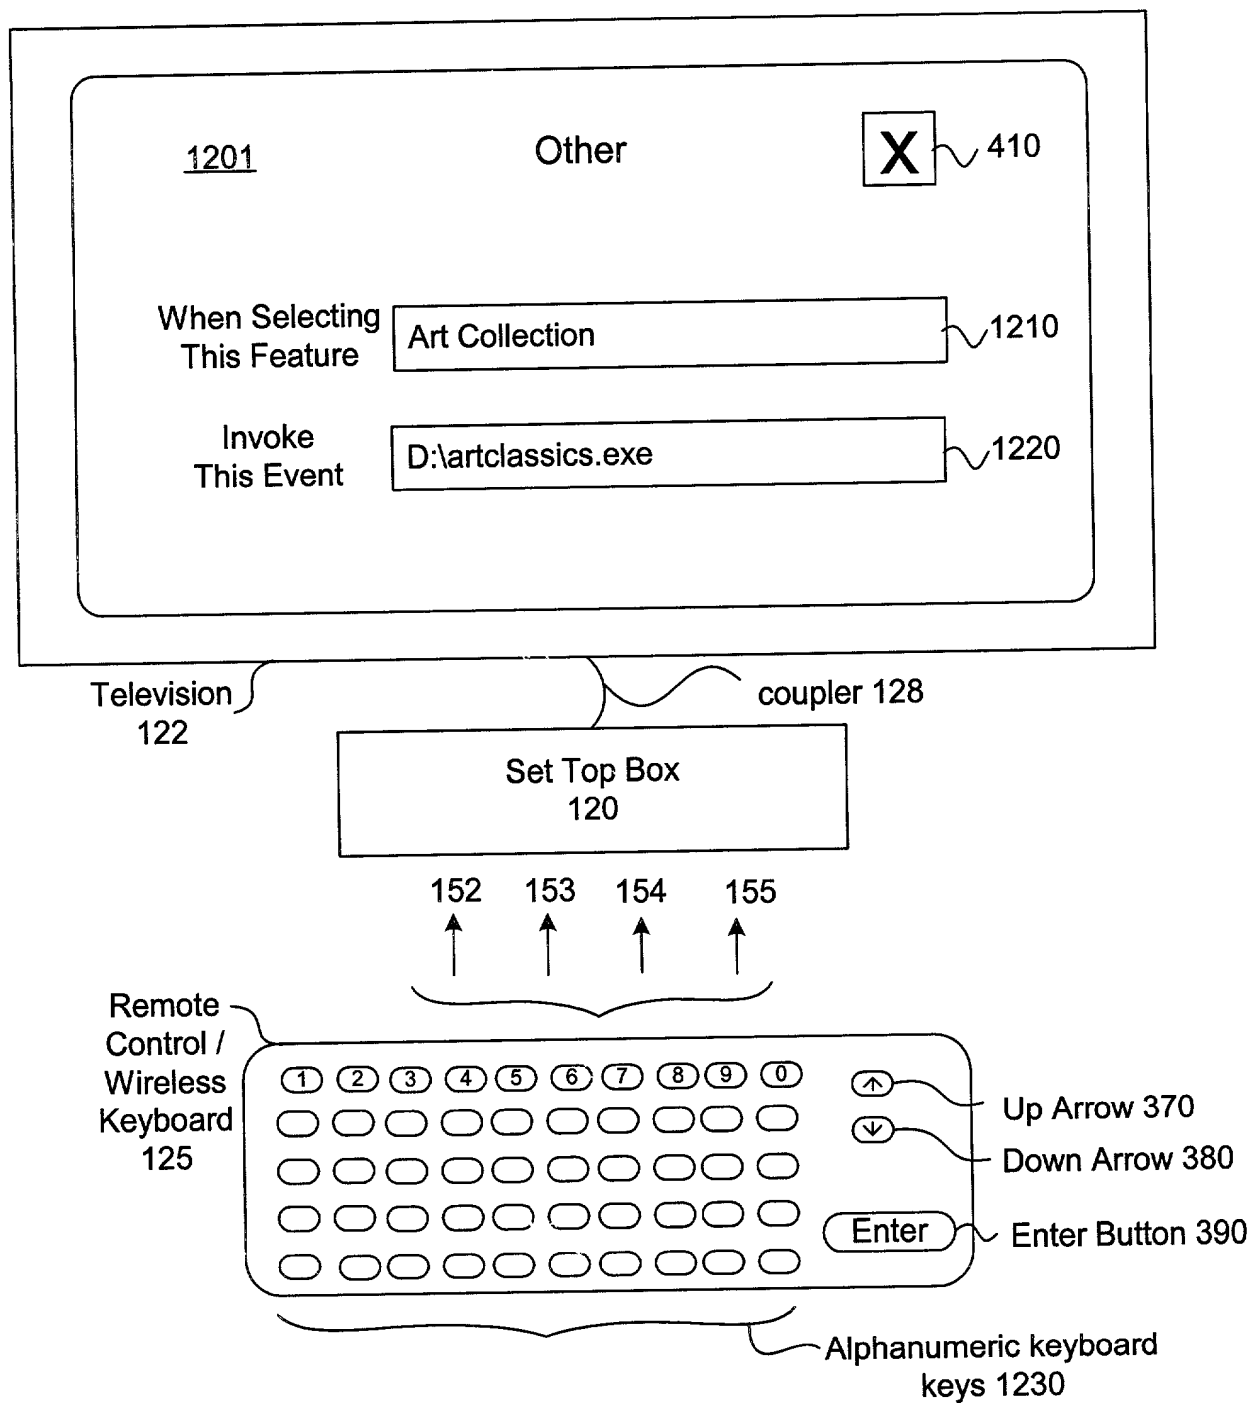 


FIG. 12


1300

Television
122

 coupler 128

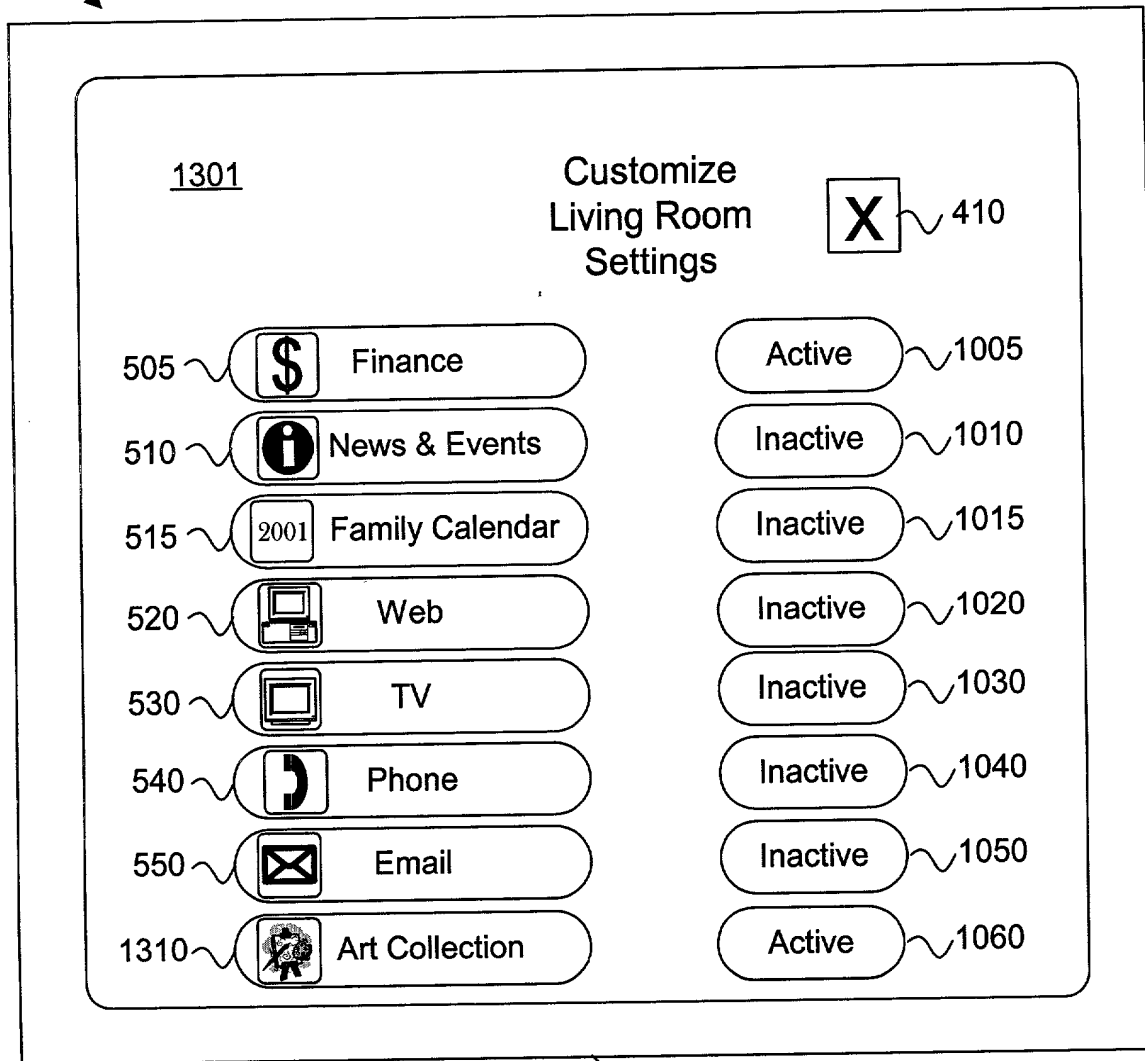

152 153 154 155

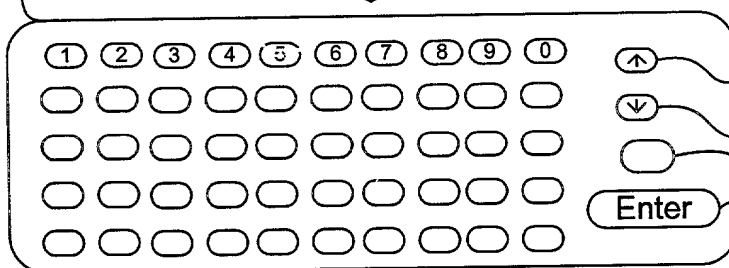 Remote
Control /
Wireless
Keyboard
125

Up Arrow 370


Down Arrow 380

420

Enter Button 390


FIG. 13

 1400

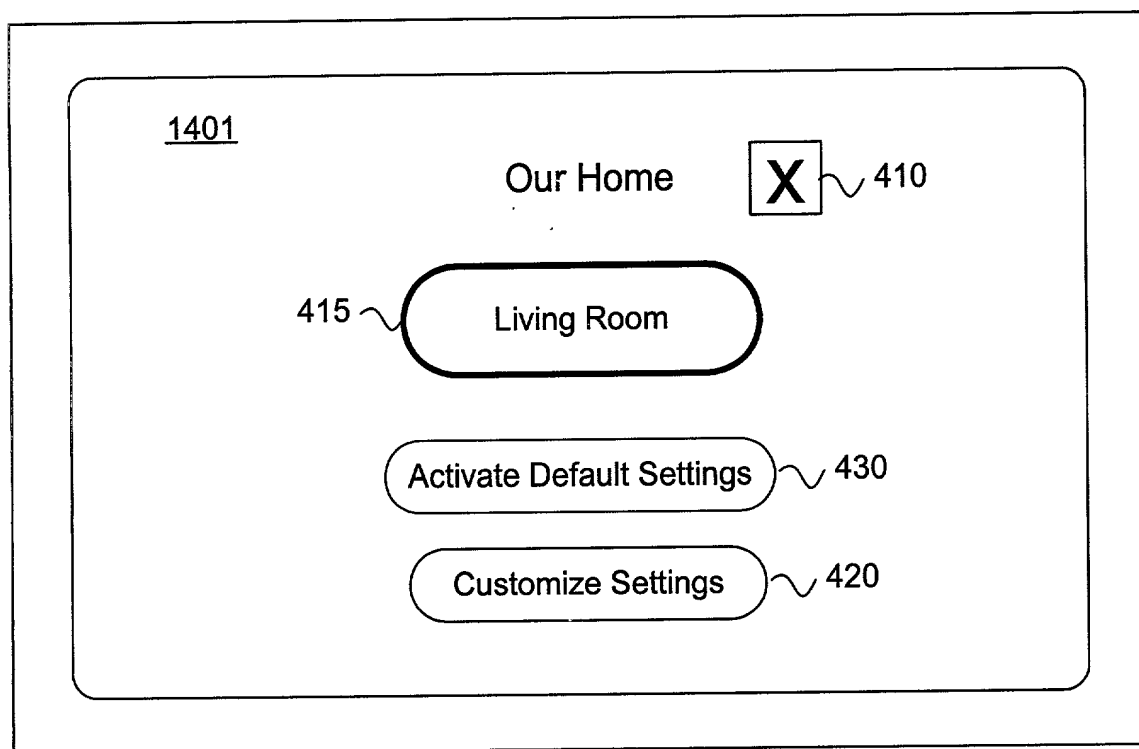

Television
122

 coupler 128

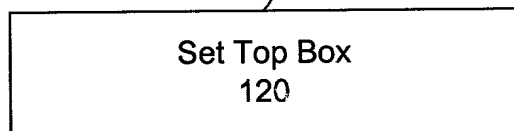

152 153 154 155

Remote
Control /
Wireless
Keyboard
125

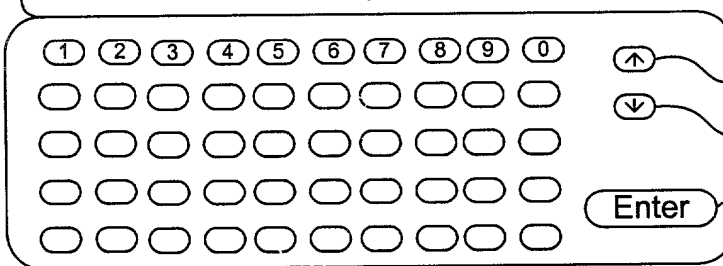 


FIG. 14

1500

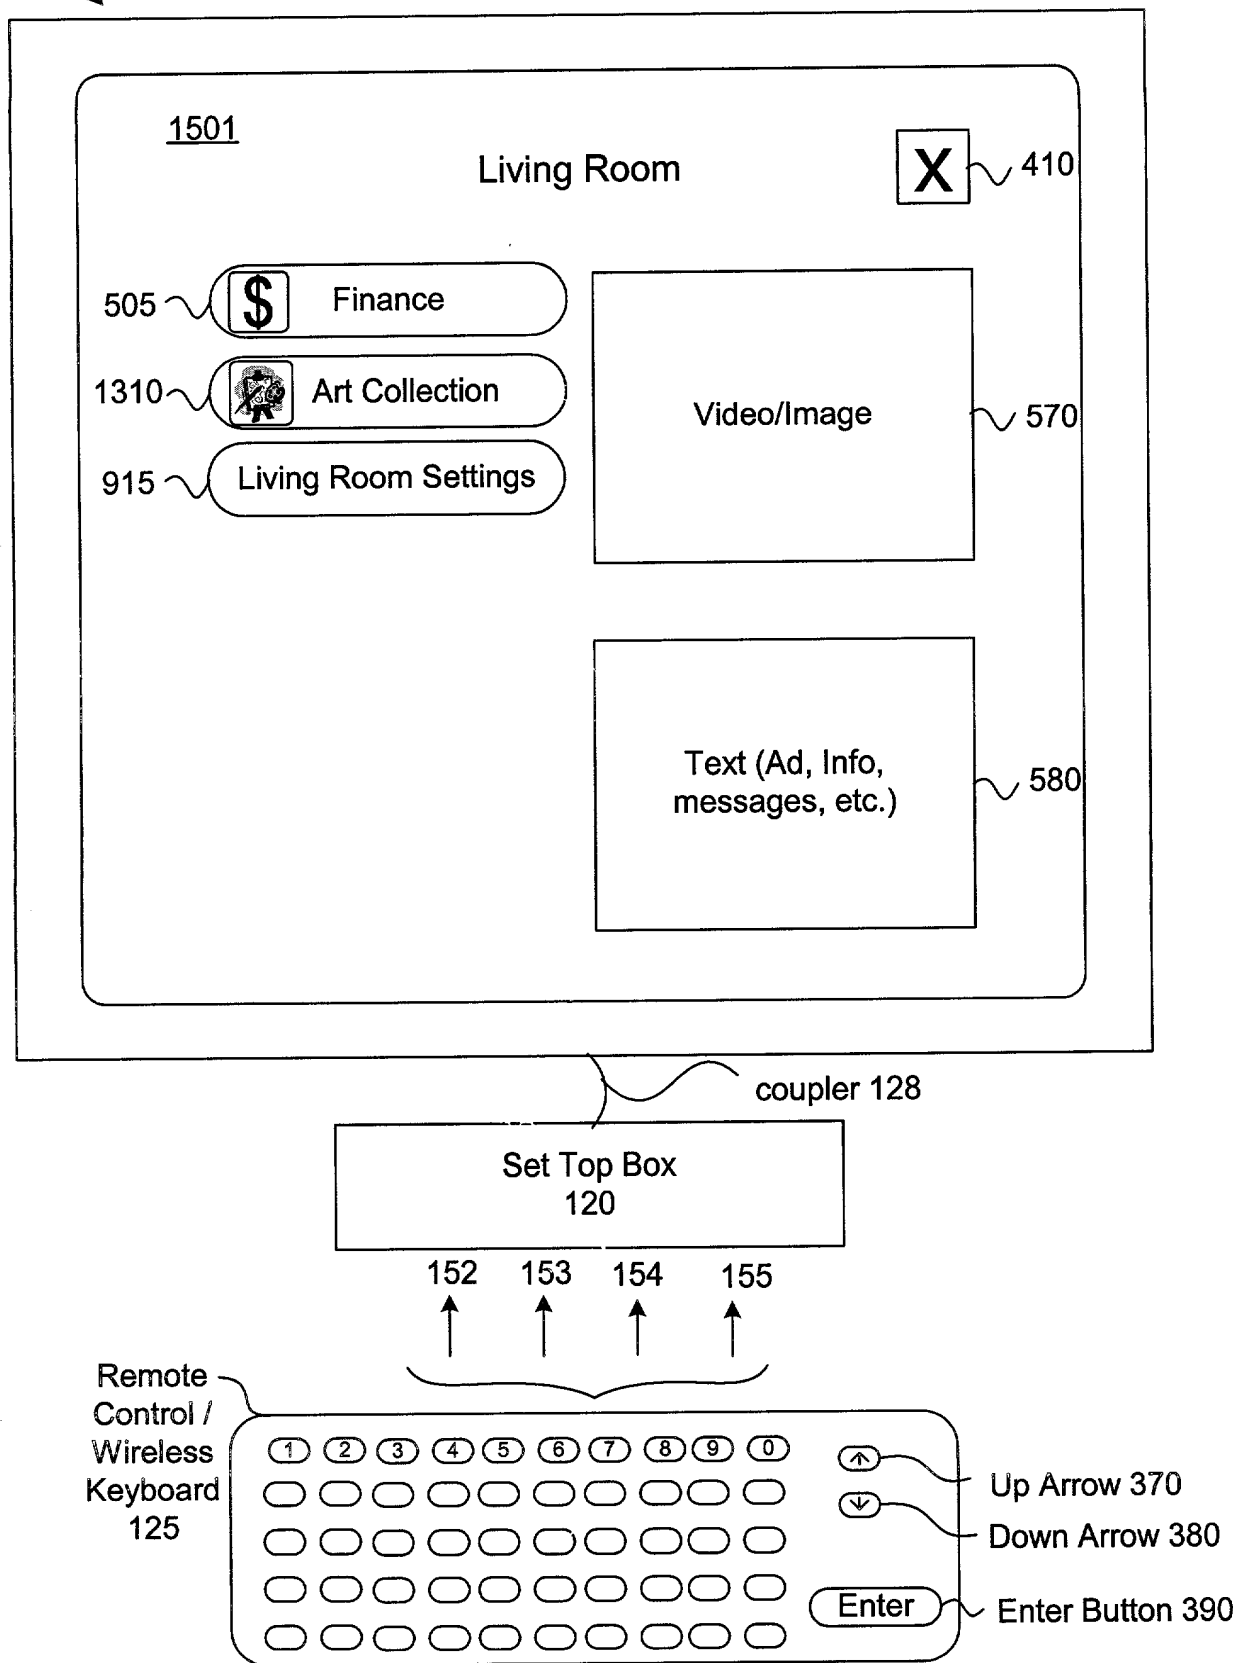 


FIG. 15

1600



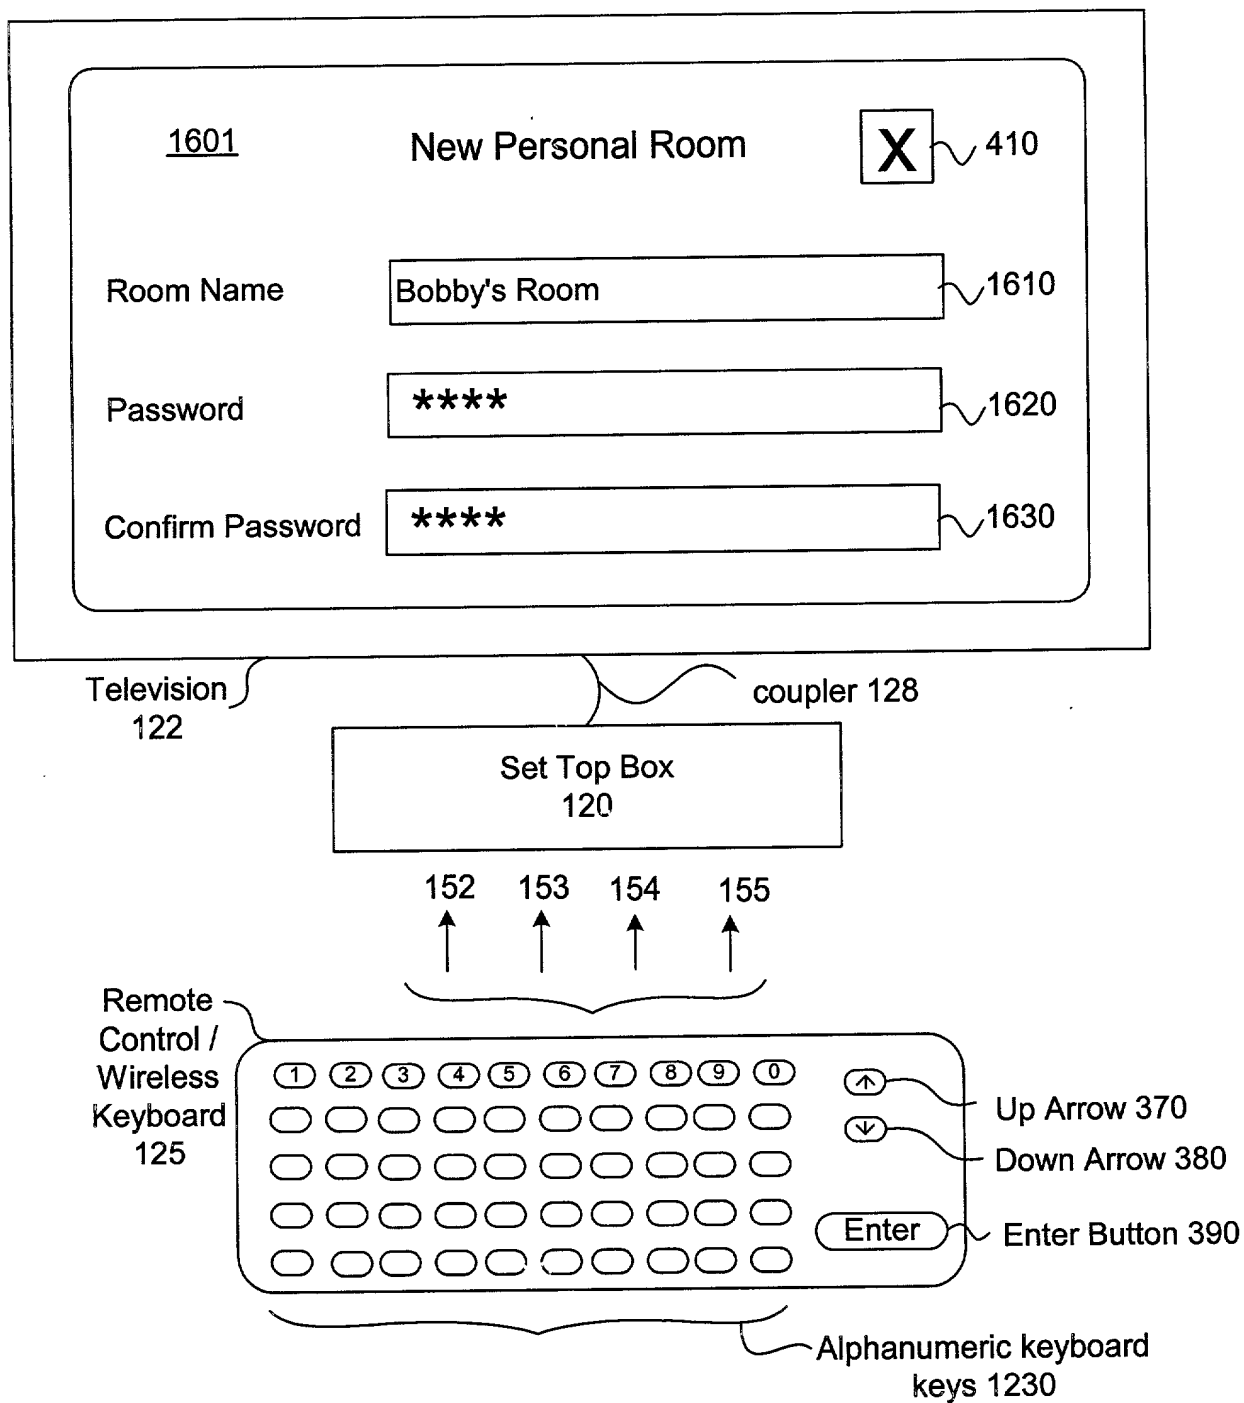 


FIG. 16

 1700

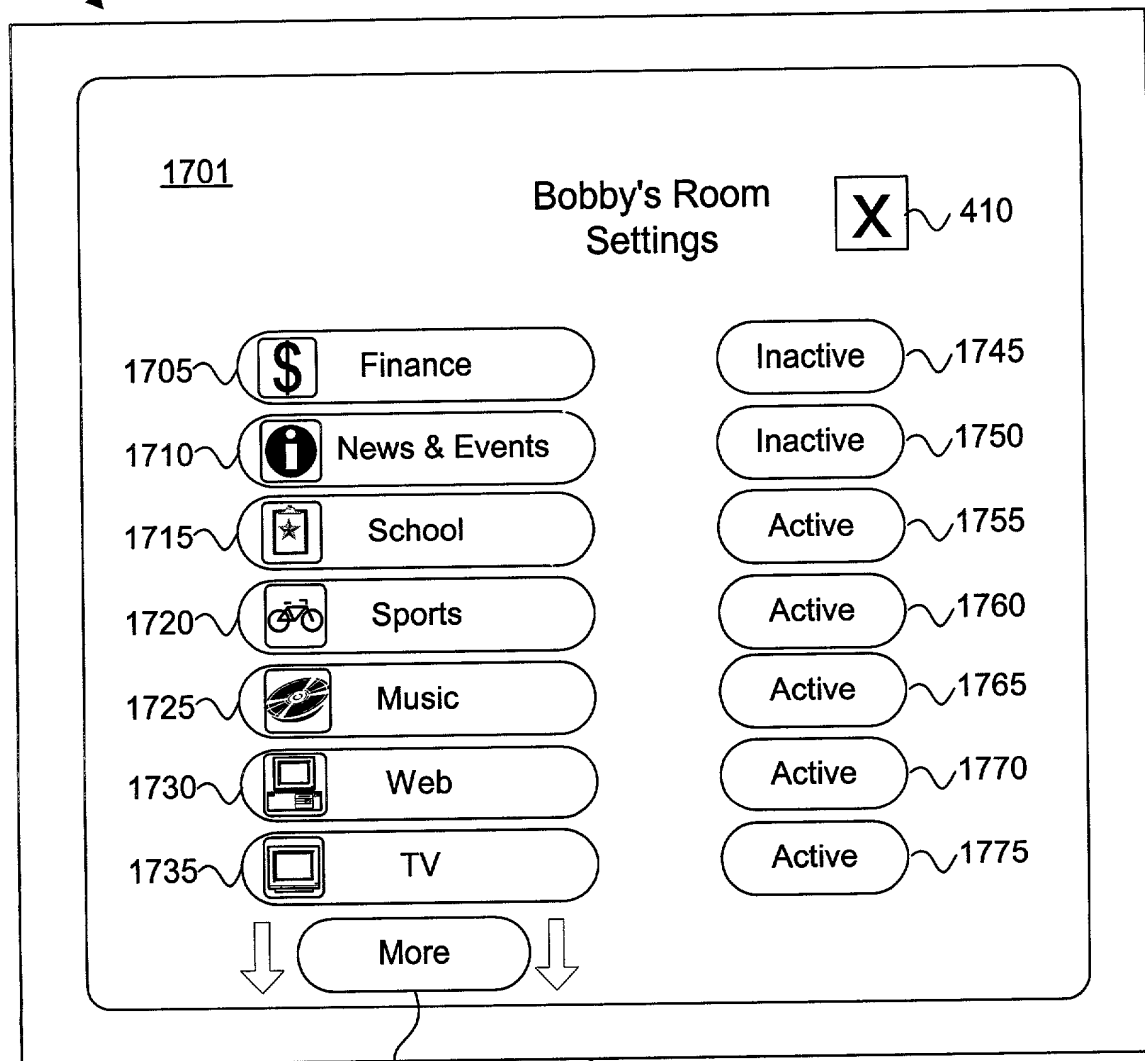

Television
122

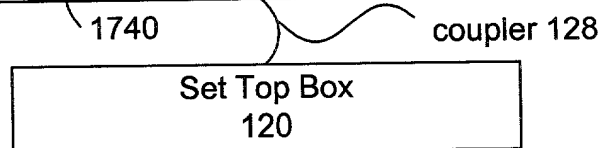 

Remote
Control /
Wireless
Keyboard
125

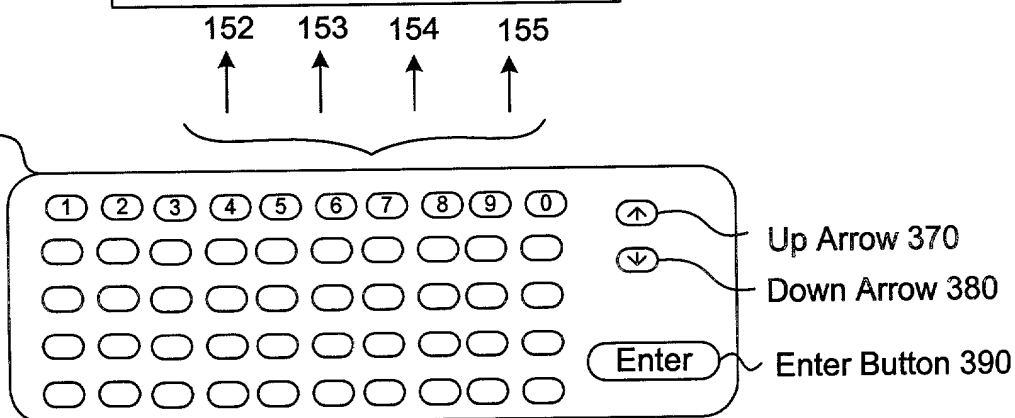 


FIG. 17



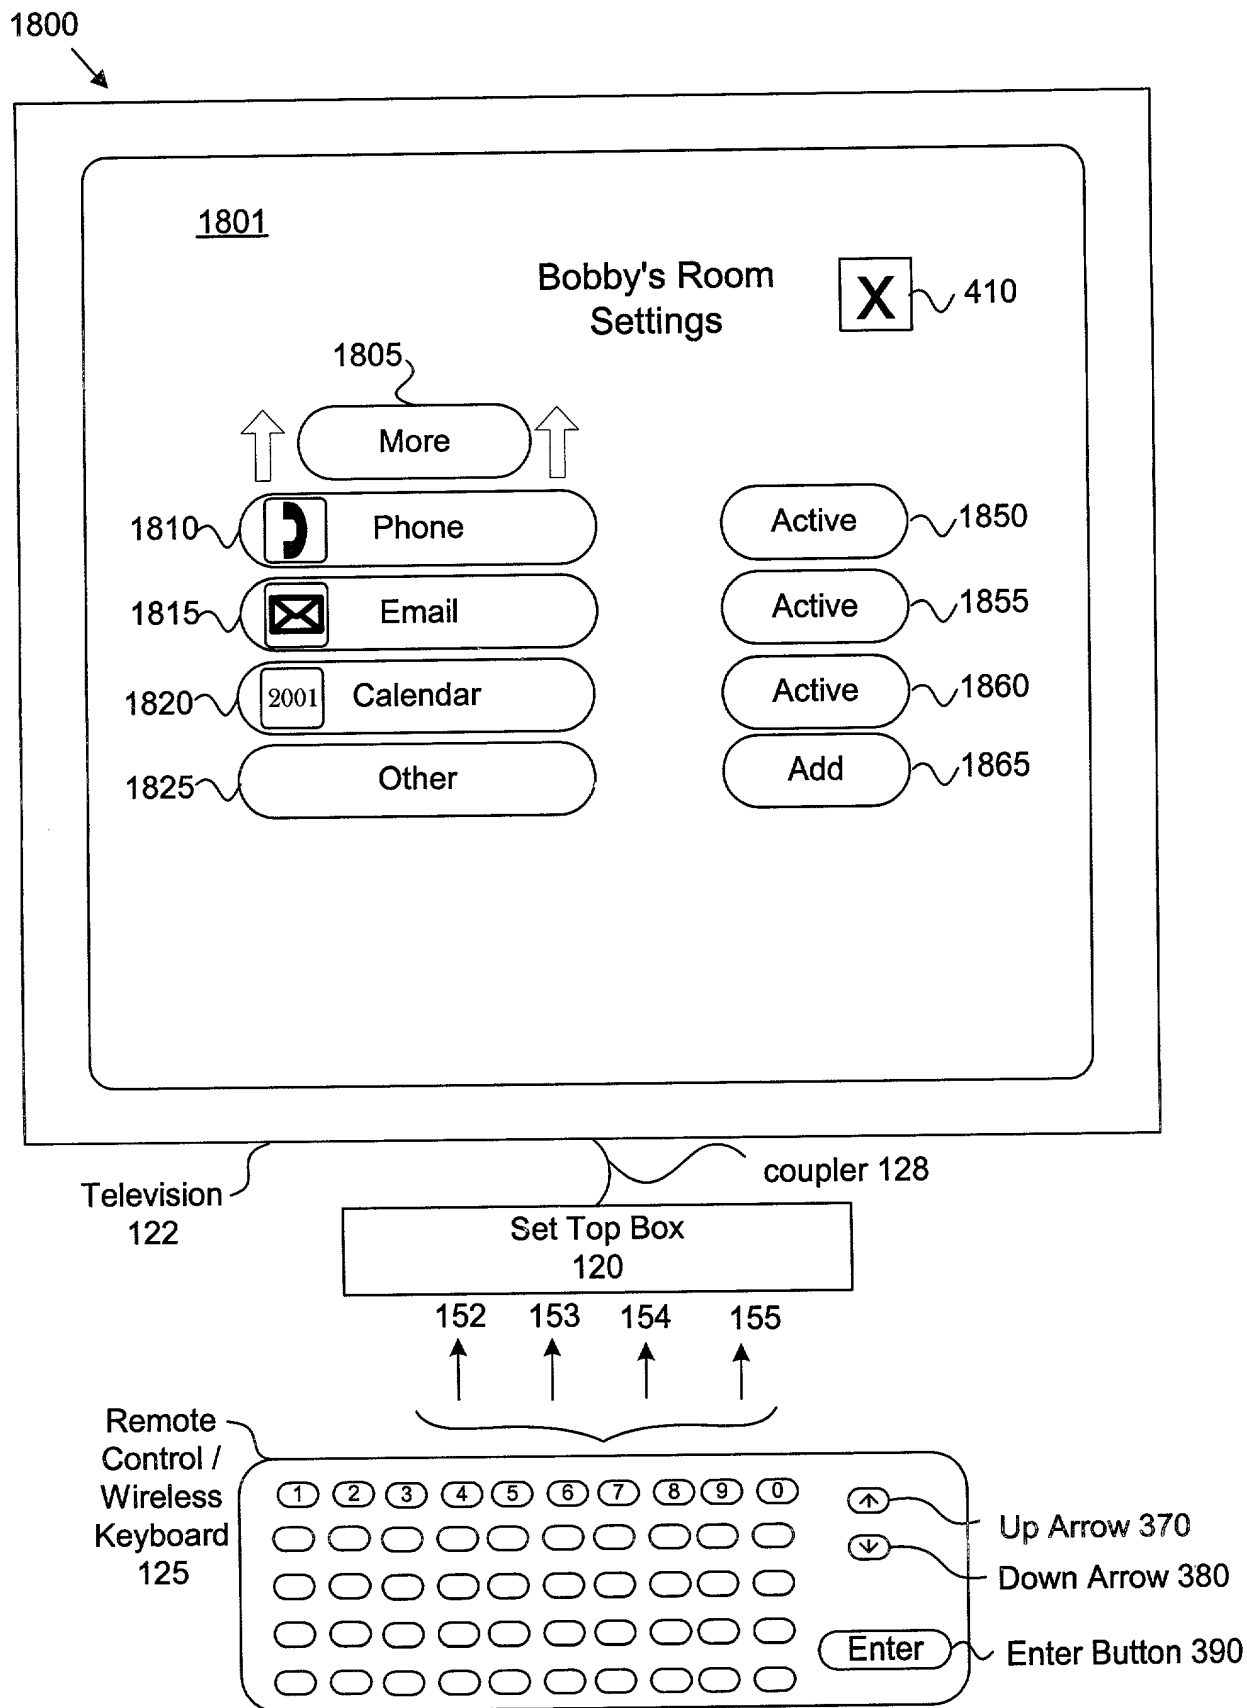 


FIG. 18

 1900

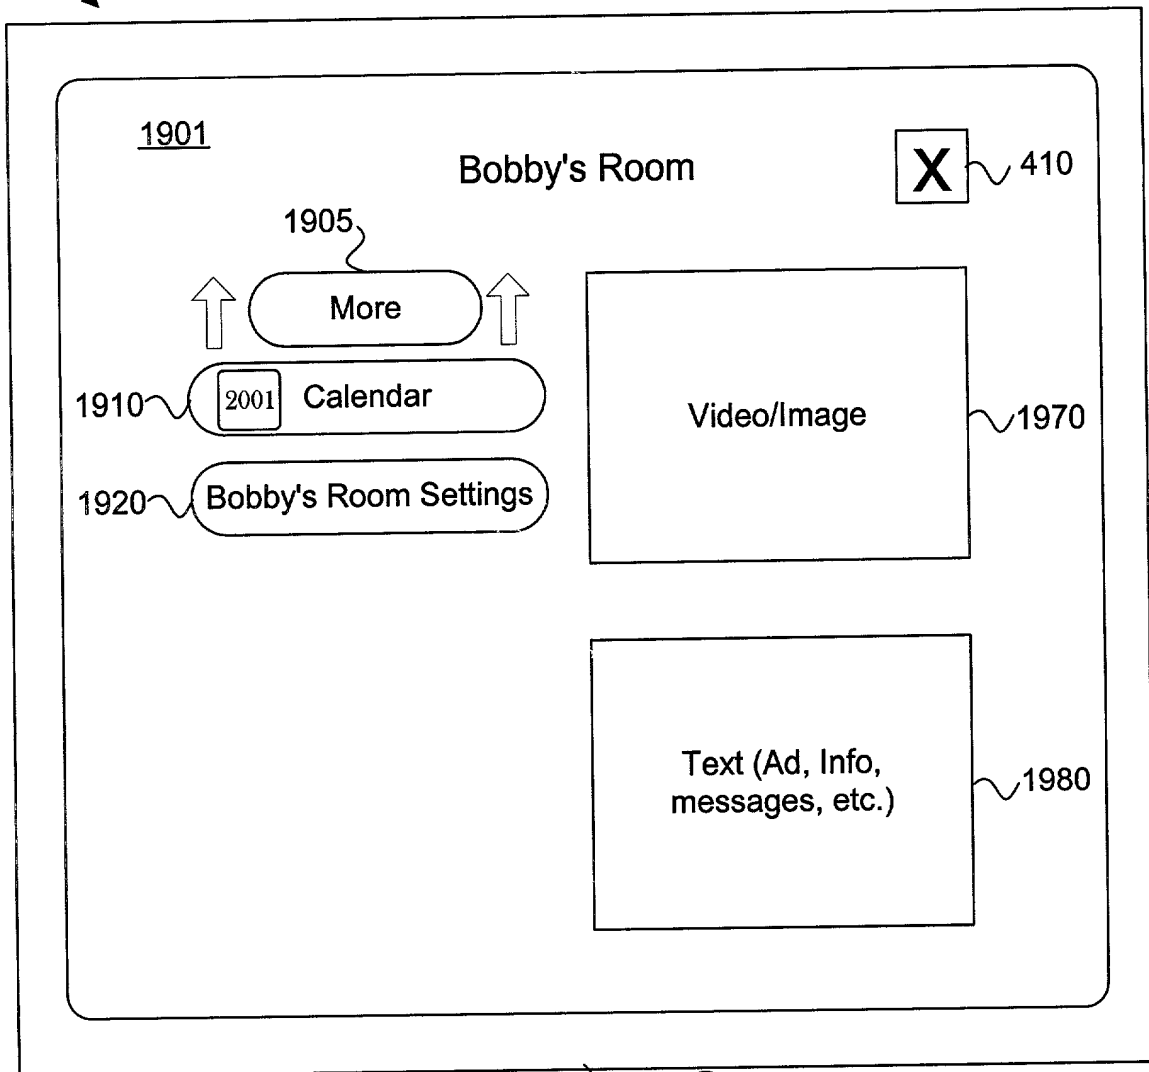


coupler 128

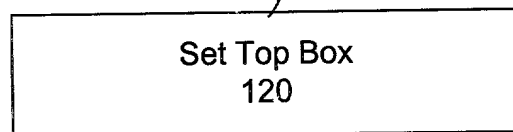 

152 153 154 155

 Remote Control / Wireless Keyboard 125

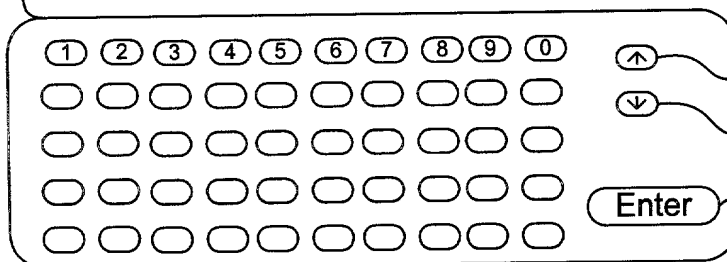

Up Arrow 370

Down Arrow 380

Enter Button 390

FIG. 19

2000

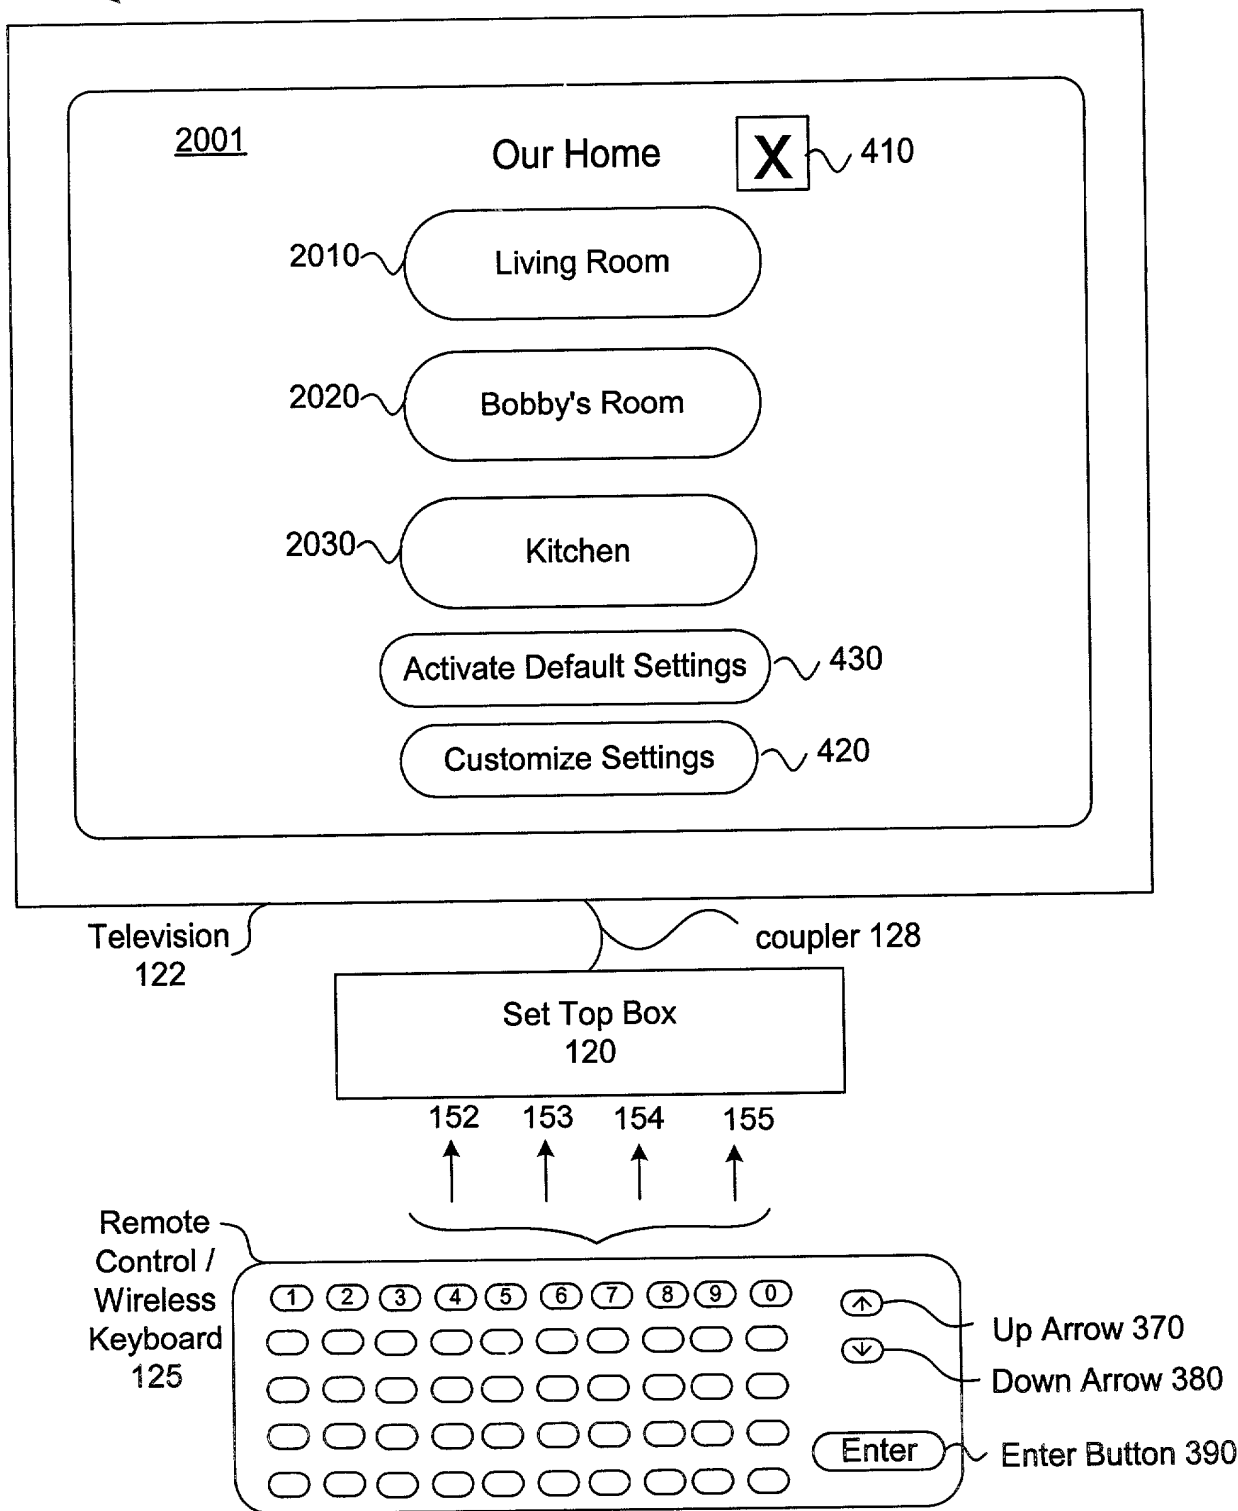 


FIG. 20

FIG. 21

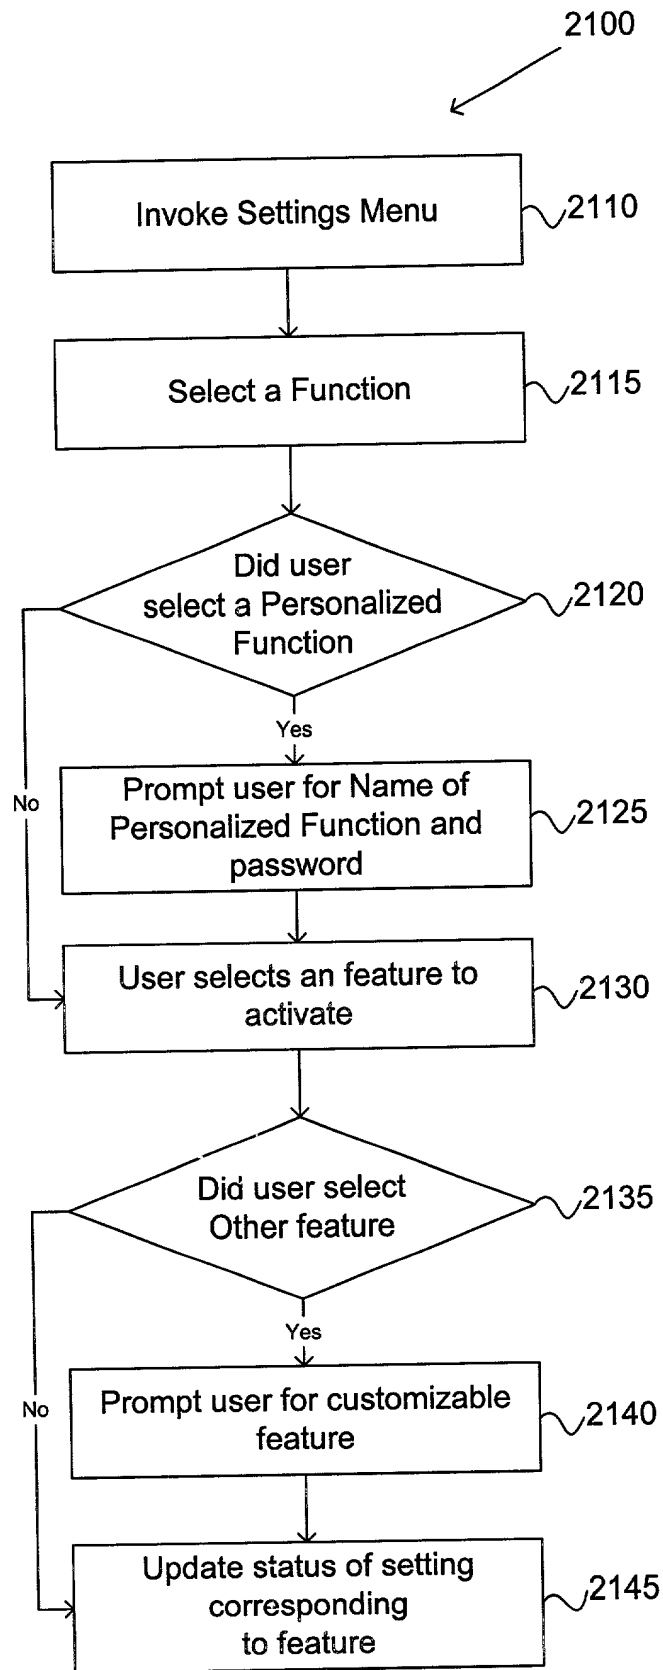 


FIG. 21

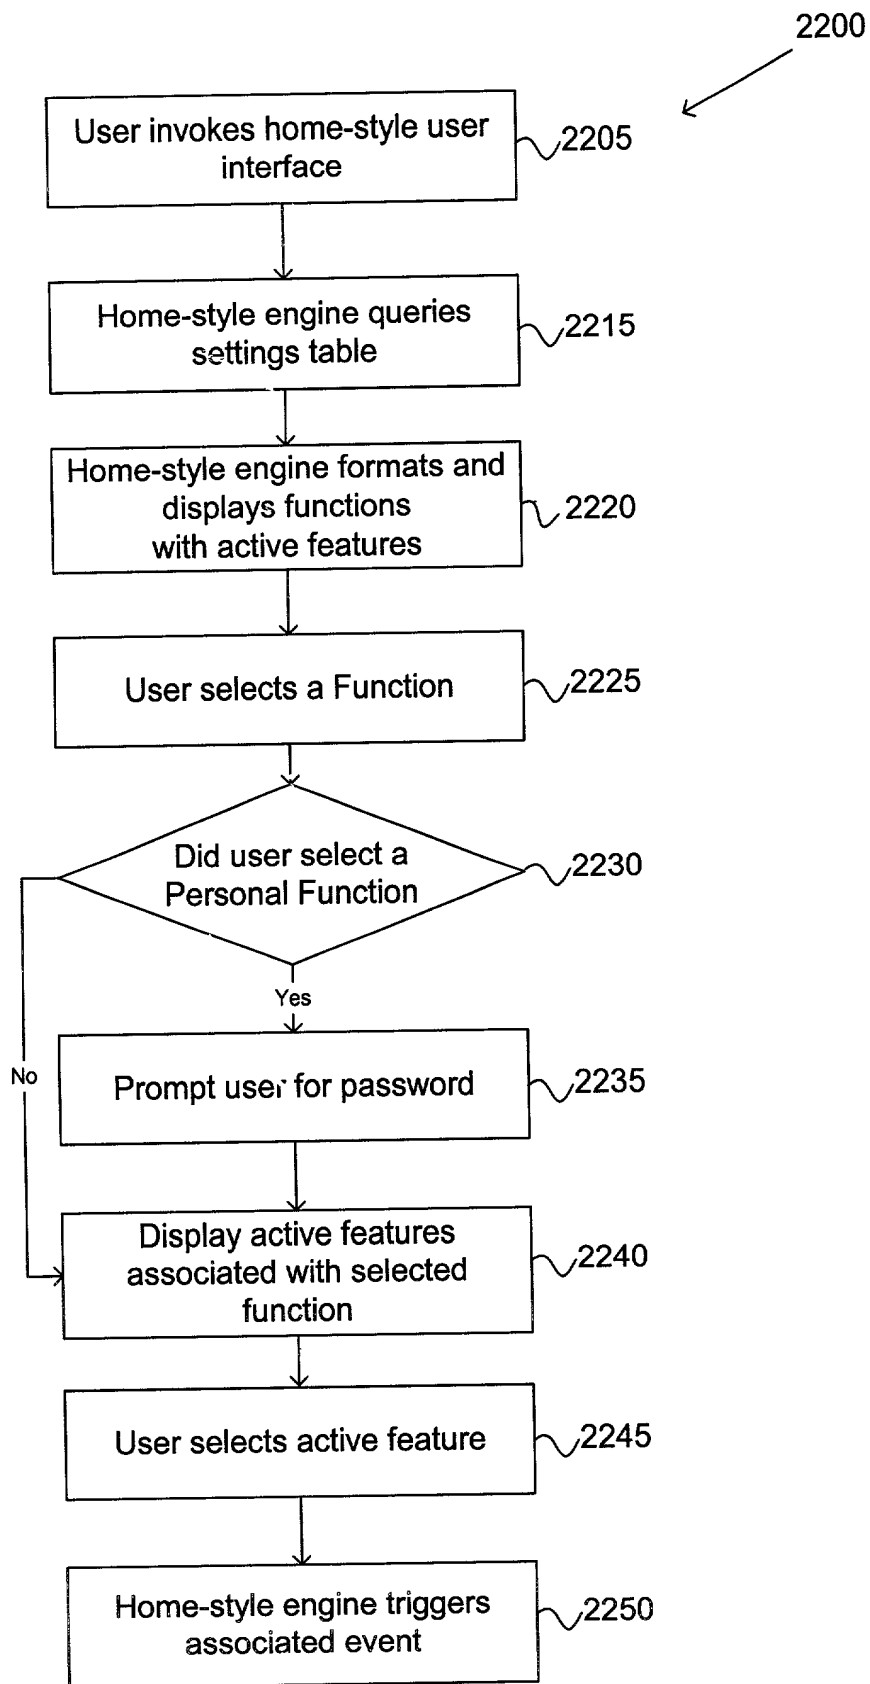 


FIG. 22

FIG. 23

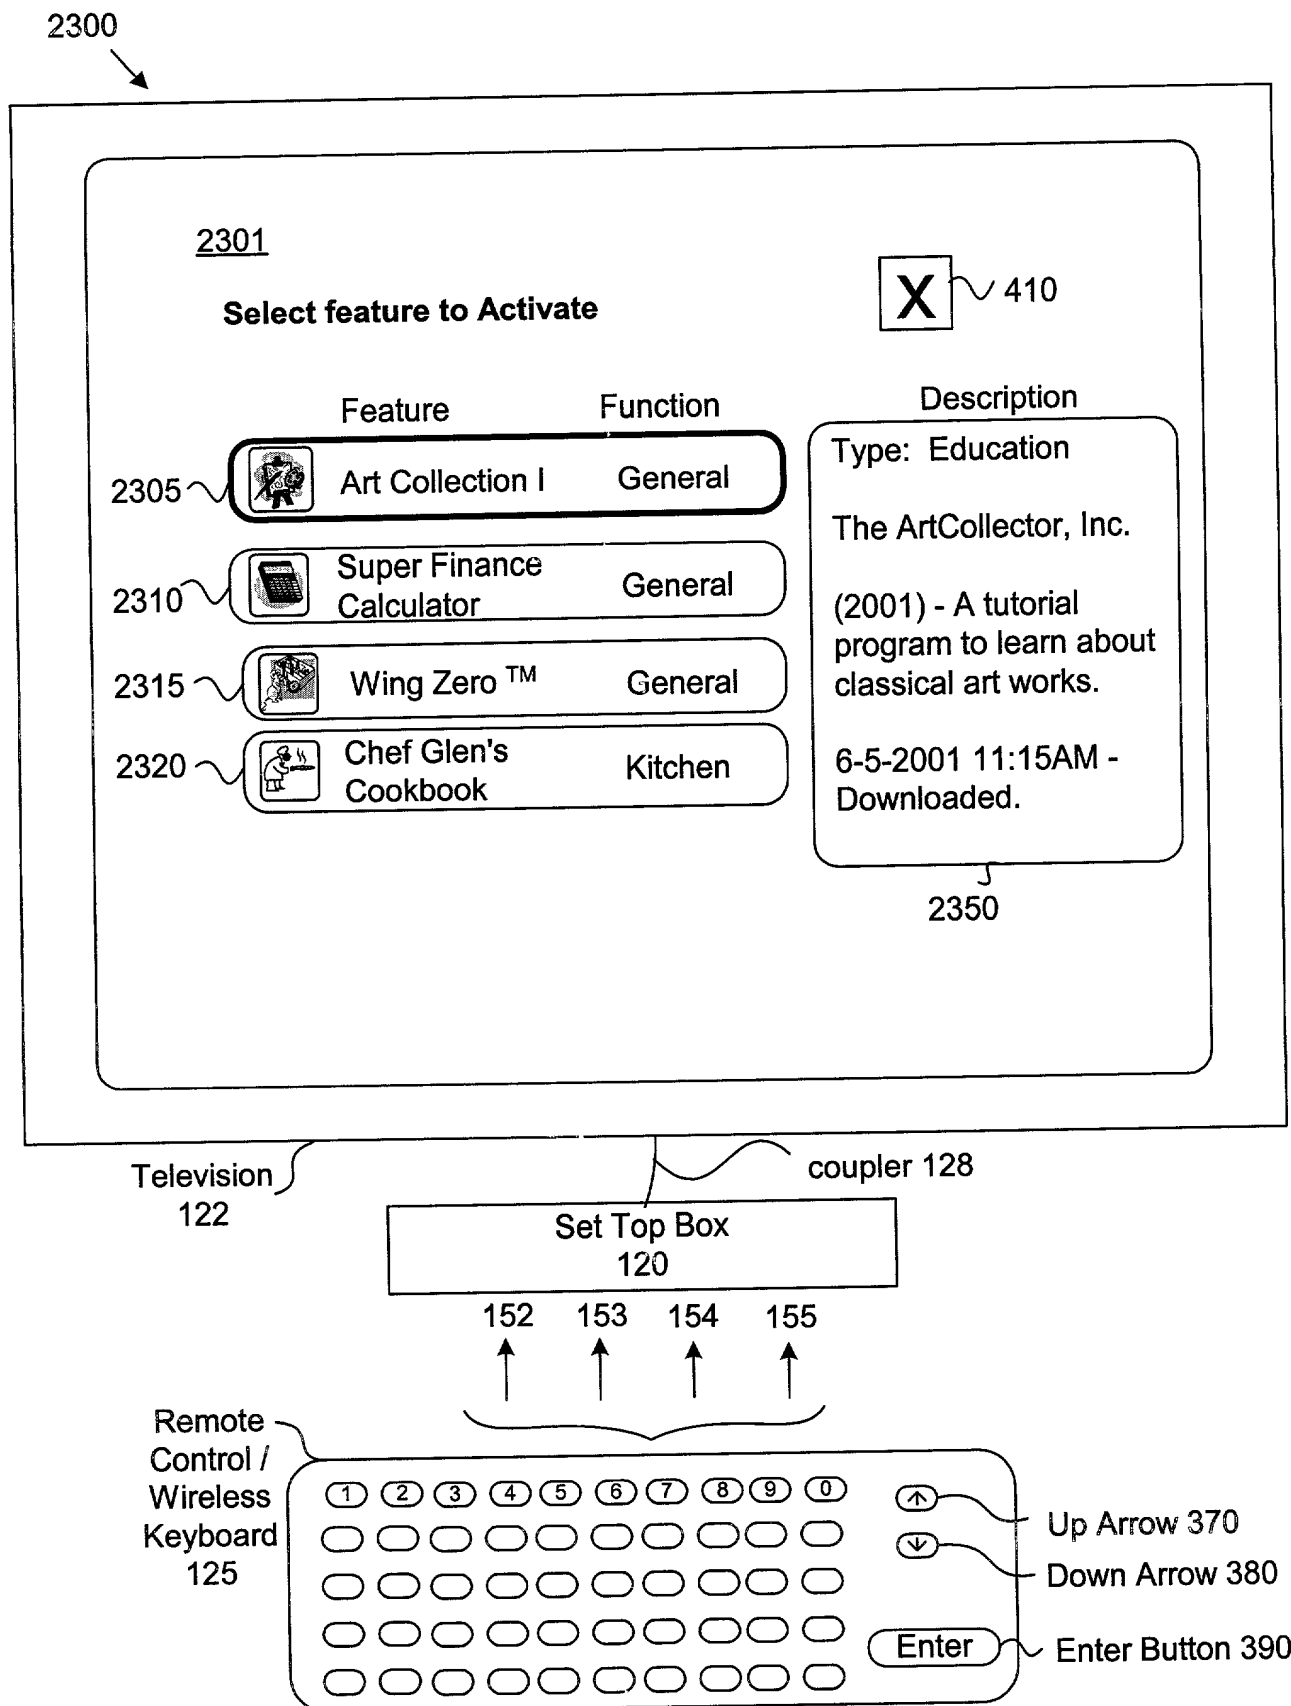 


FIG. 23

2400

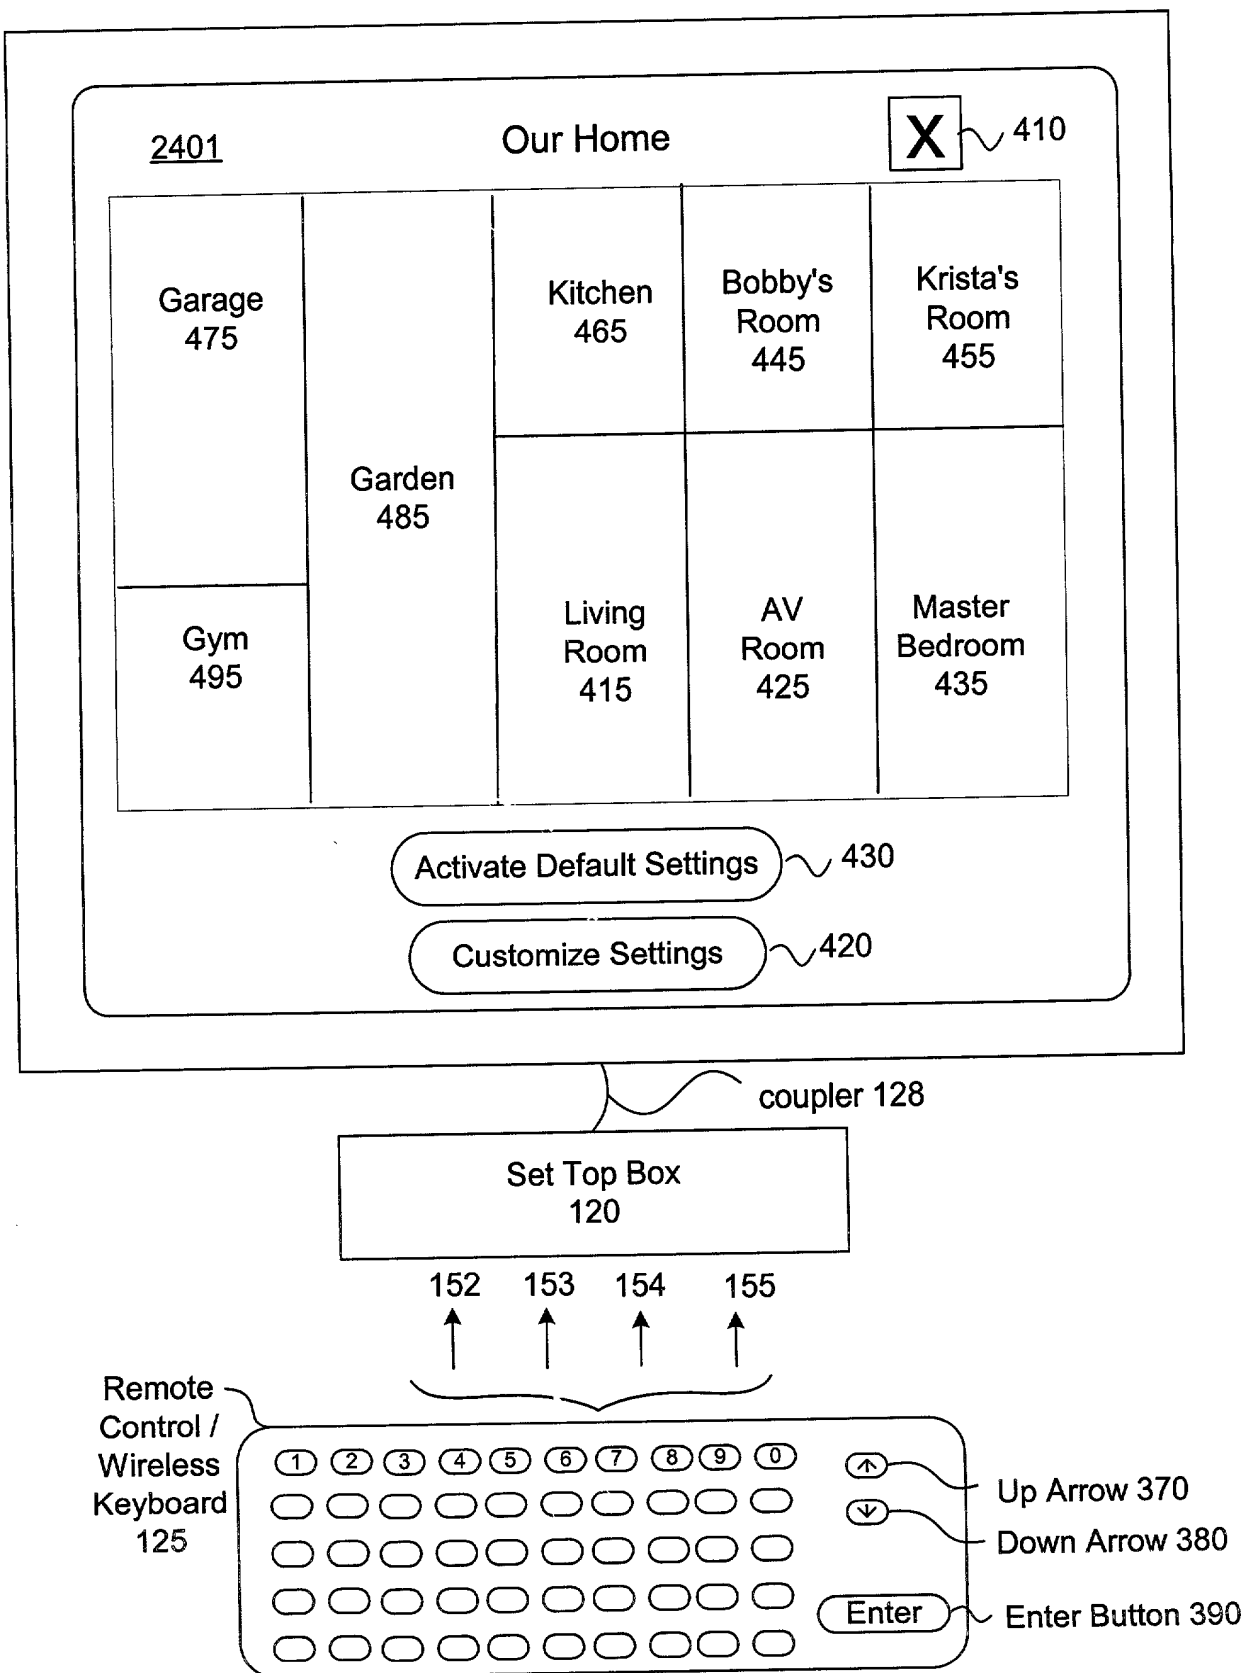 


FIG. 24



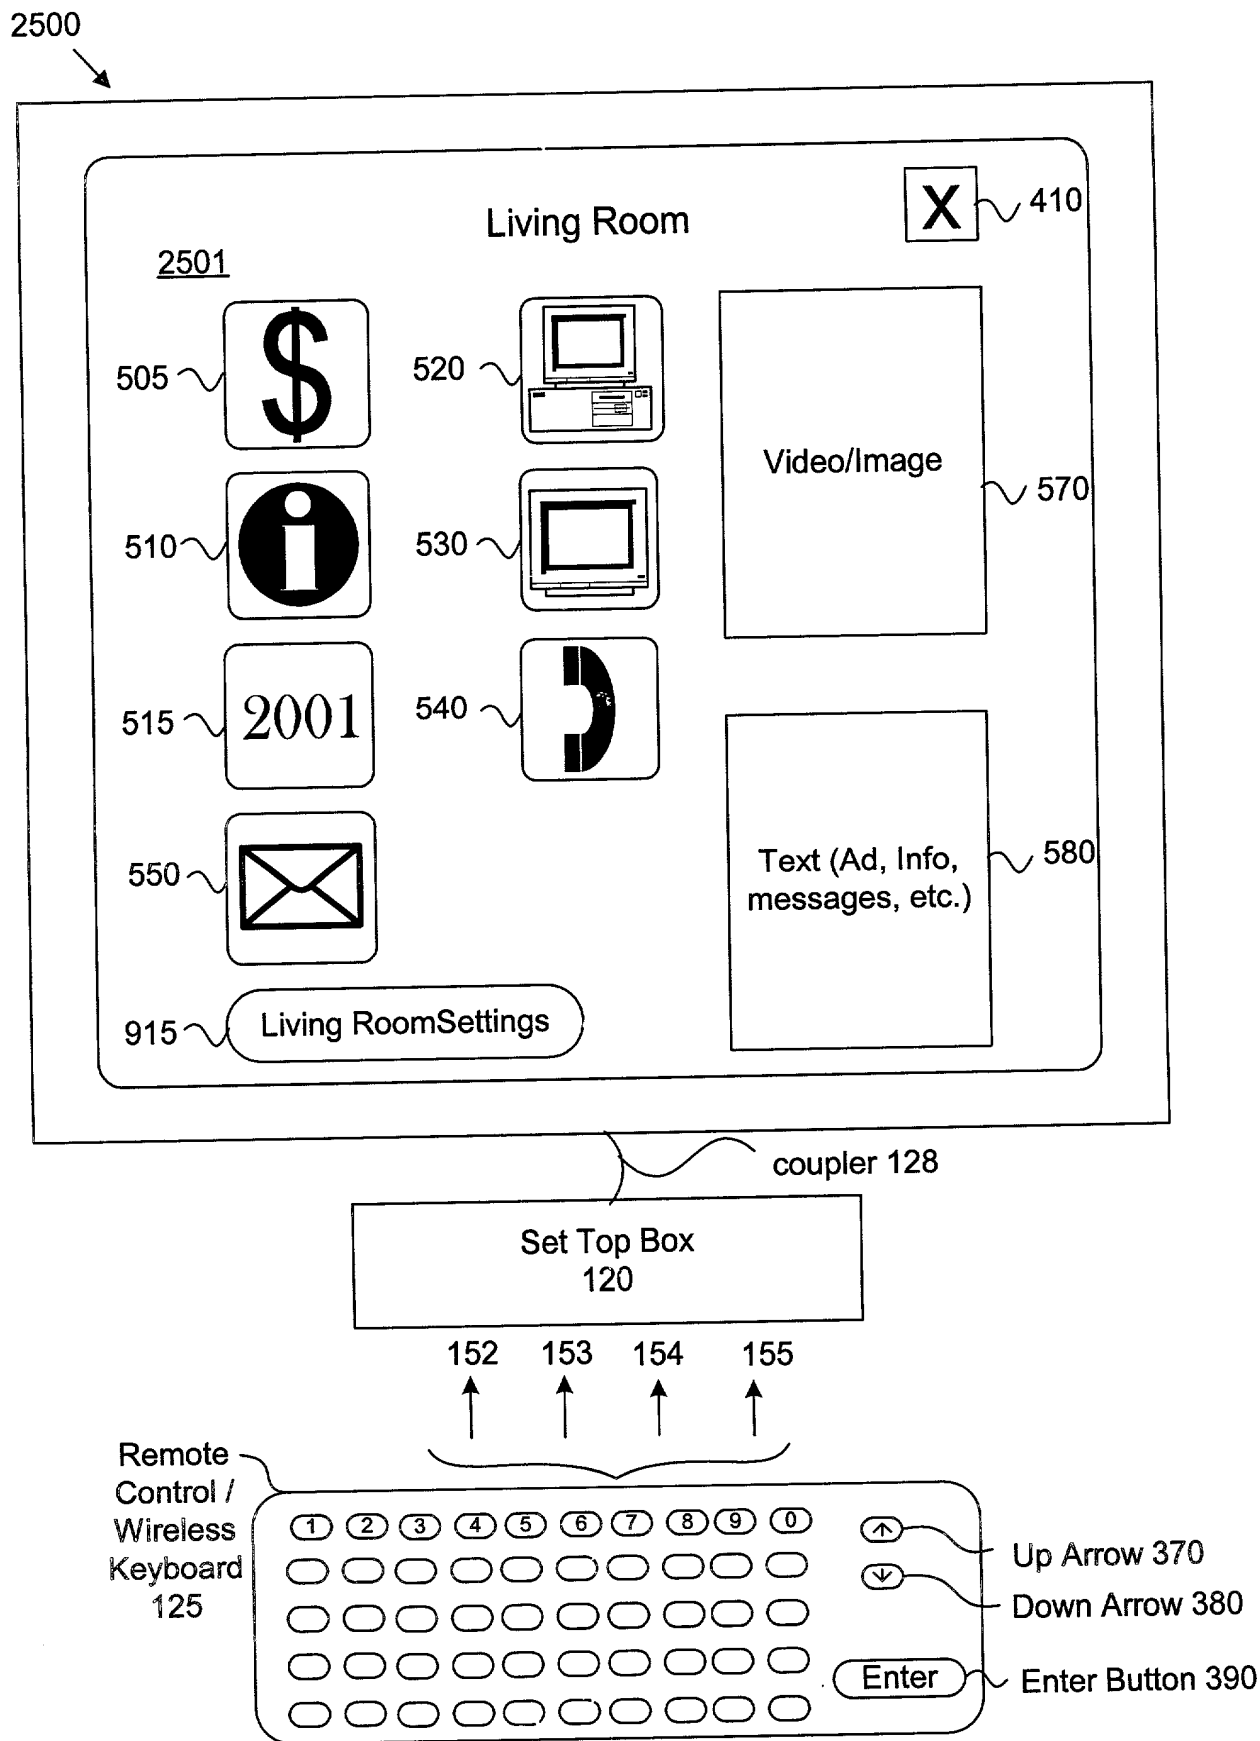 


FIG. 25

 2600

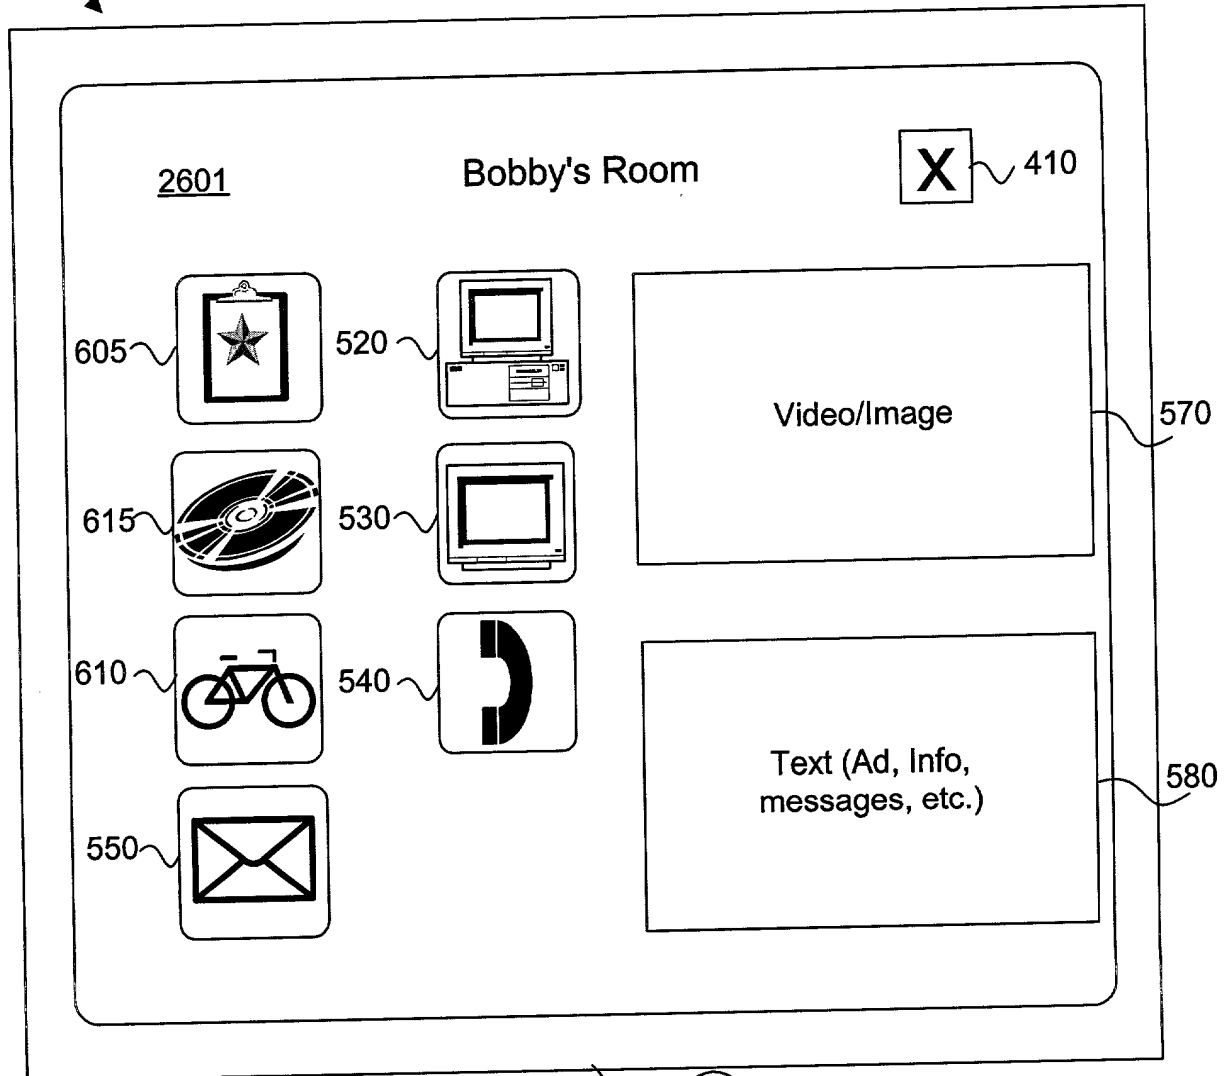


coupler 128

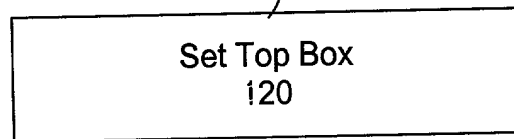 

152 153 154 155

 Remote Control /
Wireless
Keyboard
125

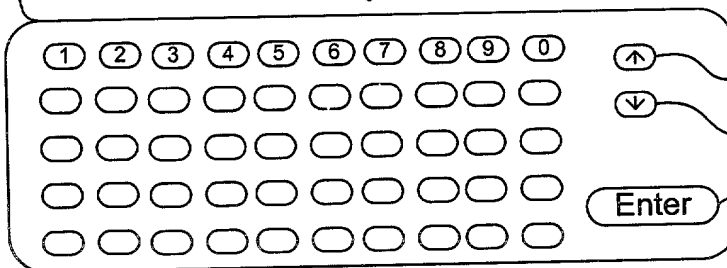

Up Arrow 370

Down Arrow 380

Enter Button 390

FIG. 26

2700


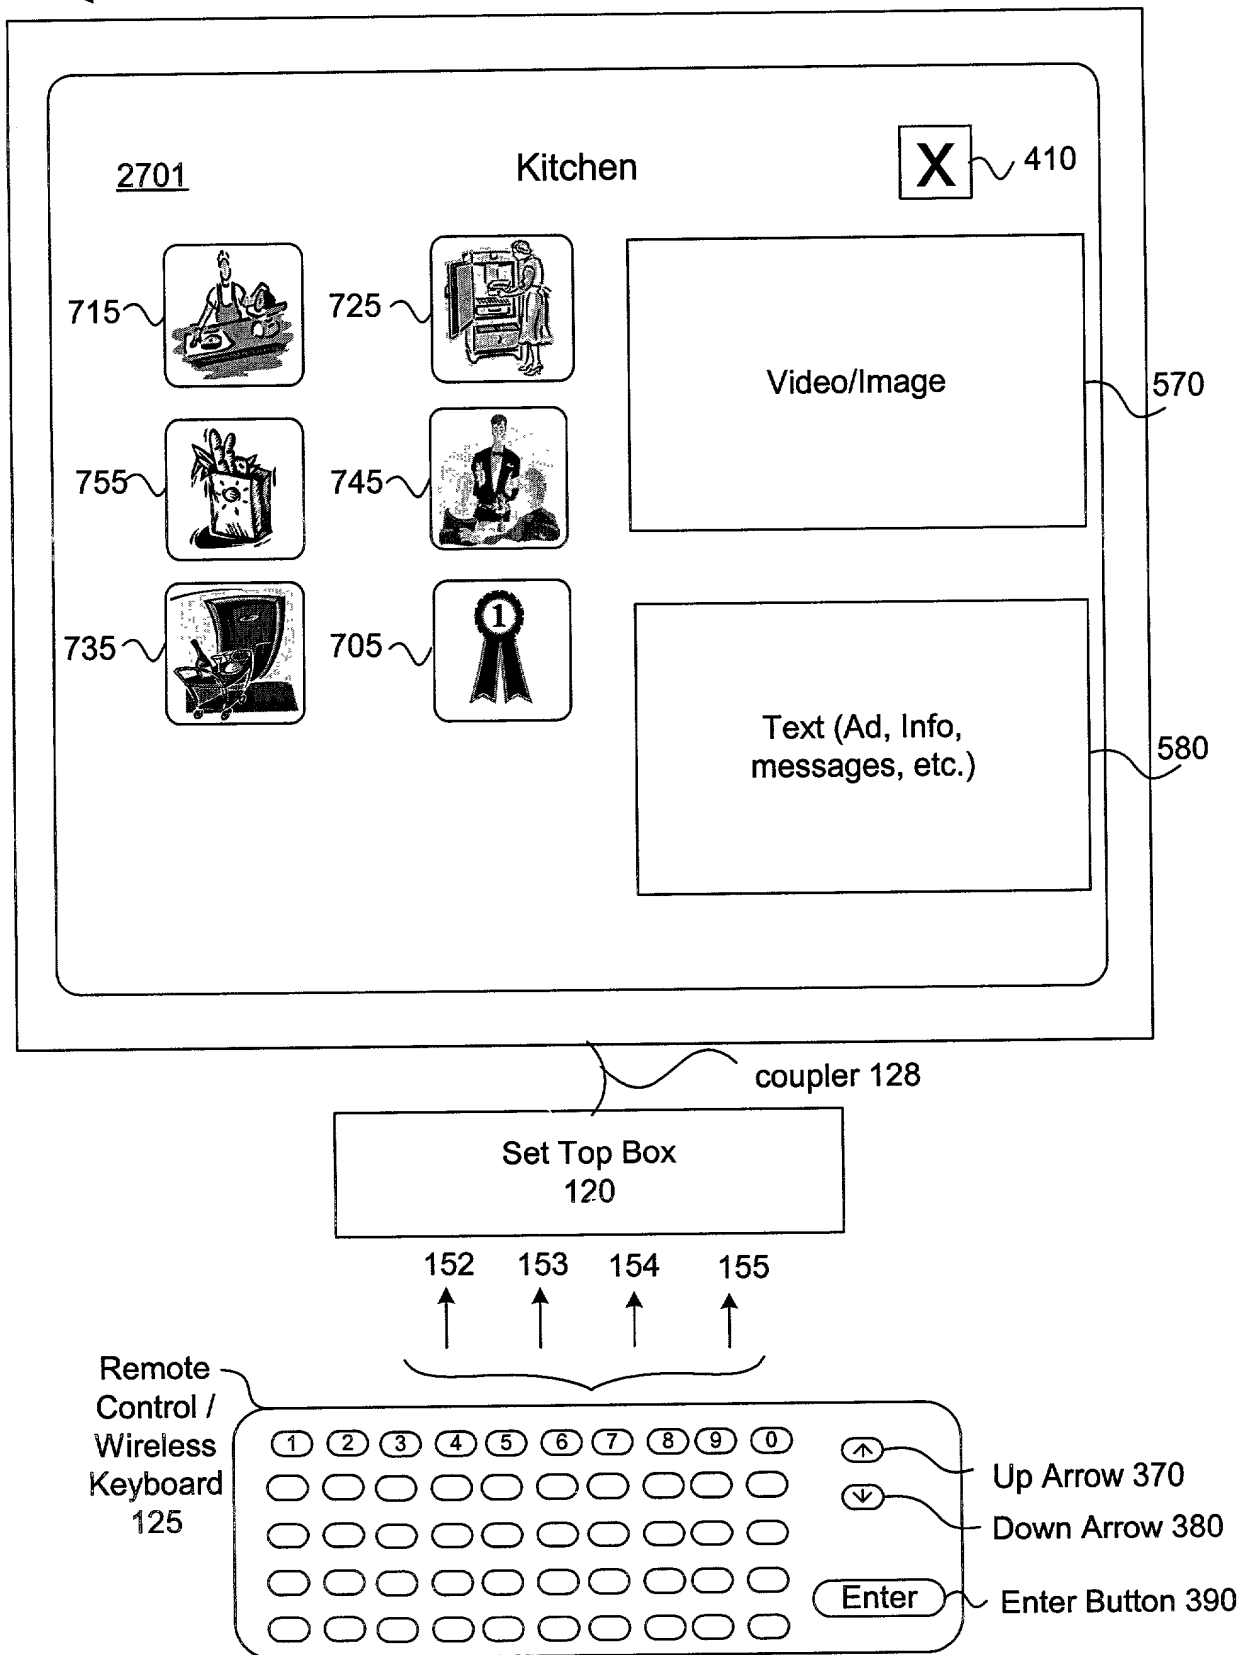 



FIG. 27

 2800

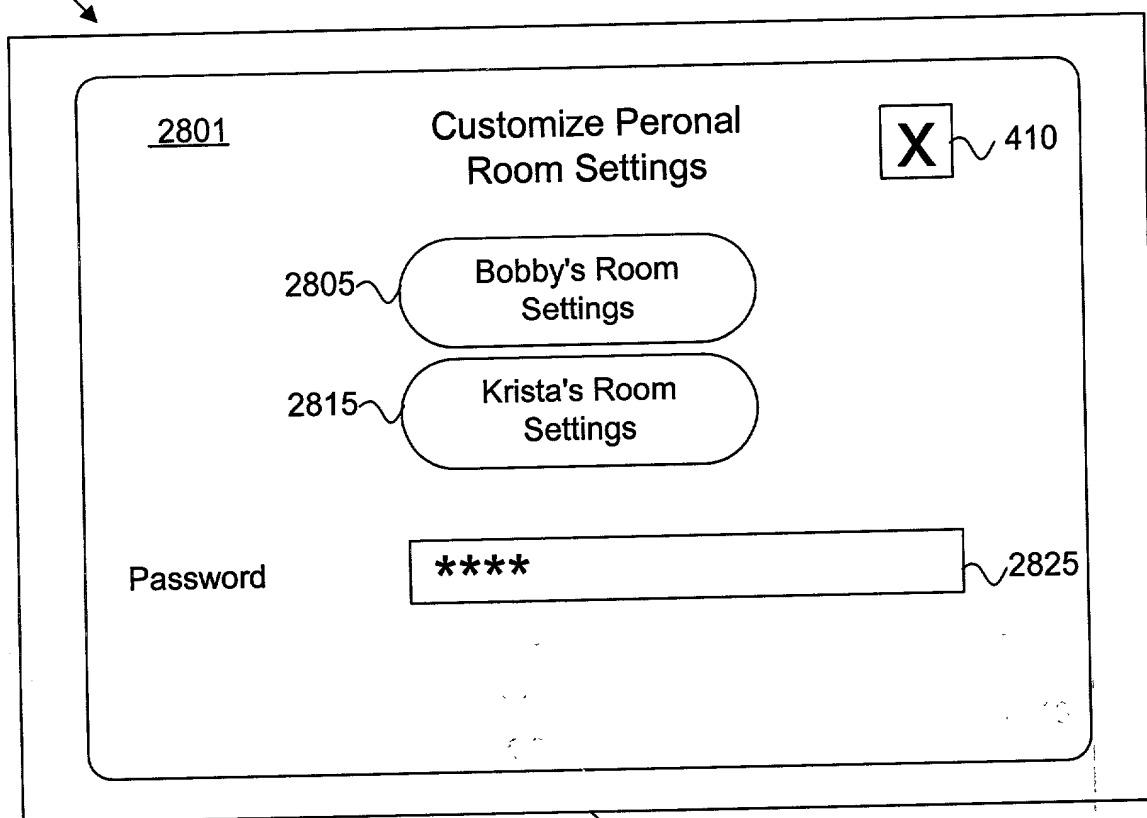

Television
122

 
coupler 128

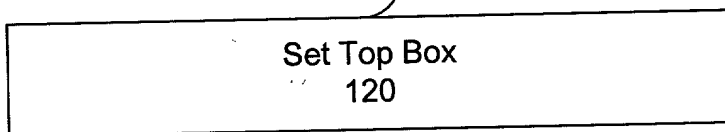

152 153 154 155



 Remote
Control /
Wireless
Keyboard
125

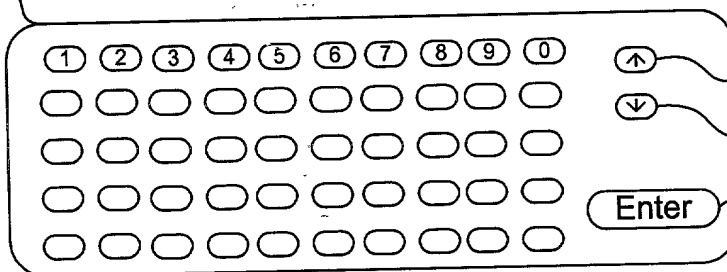

Up Arrow 370

Down Arrow 380

Enter Button 390

FIG. 28